

Technical description

ULTRAFLOW® 54/
ULTRAFLOW® 34
DN15-125



Contents

1	General description	6
2	Data.....	7
2.1	Electrical data.....	7
2.2	Mechanical data.....	7
2.3	Flow data.....	8
2.4	Materials	9
3	Type overview	10
3.1	ULTRAFLOW® 54.....	10
3.2	ULTRAFLOW® 34.....	10
4	Ordering details.....	11
4.1	ULTRAFLOW® 54.....	11
4.2	ULTRAFLOW® 34.....	12
4.3	Accessories for ULTRAFLOW®.....	13
4.4	Pulse Transmitter / Pulse Divider and Cable Extender Box	14
4.4.1	Introduction	14
4.4.2	Type number composition of Pulse Transmitter and Pulse Divider	14
4.4.3	Output module and supply module.....	14
4.4.4	Pulse Divider configuration CCC-DD-E-MMM	16
4.4.5	Accessories for Pulse Transmitter and Pulse Divider.....	19
4.4.6	Cables	19
4.4.7	Cable Extender Box.....	19
5	Dimension sketches.....	20
5.1	Threaded meters	20
5.1.1	ULTRAFLOW® 54 (Type 65-5-XXHX-XXX) – G $\frac{3}{4}$ B and G1B	20
5.1.2	ULTRAFLOW® 54 (Type 65-5-XXJX-XXX) – G1 $\frac{1}{4}$ B, G1 $\frac{1}{2}$ B and G2B.....	21
5.1.3	ULTRAFLOW® 34 – G $\frac{3}{4}$ B and G1B	22
5.1.4	ULTRAFLOW® 34 – G5/4B and G2B.....	23
5.2	Flange meters	24
5.2.1	ULTRAFLOW® 54/34 – DN20 to DN50.....	24
5.2.2	ULTRAFLOW® 54/34 – DN65 to DN125.....	25
5.3	Pulse Transmitter and Pulse Divider.....	26
5.4	Cable Extender Box.....	27
6	Pressure loss.....	28
6.1	Pressure loss ULTRAFLOW® 54	29
6.2	Pressure loss ULTRAFLOW® 34	31
7	Installation.....	32
7.1	Introduction	32
7.1.1	Guidelines for dimensioning ULTRAFLOW®	32

ULTRAFLOW® 54/34

7.1.2	Connections, accessories and assembly	35
7.1.2.1	Couplings and mounting of temperature sensors	35
7.1.2.2	Insulation	36
7.1.3	Maintenance and service during operation	36
7.2	Orientation of ULTRAFLOW® 54/34 (mounted separately)	37
7.3	Inlet prerequisites	39
7.4	Operating pressure	39
7.5	Humidity and condensation	40
7.5.1	Flow sensor orientation	40
7.5.2	Orientation of Pulse Transmitter and Pulse Divider	40
7.6	Installation examples (mechanical)	41
7.6.1	MULTICAL® 603 mounted on ULTRAFLOW® 54 (Type 65-5-XXHX-XXX)	41
7.6.1.1	Installation in an ascending pipe	41
7.6.1.2	Installations at or above eye level	41
7.6.1.3	Installation at ground level	42
7.6.1.4	Mounting of angle bracket 3026-858	43
7.6.2	MULTICAL® 603 mounted on ULTRAFLOW® 54 (Type 65-5-XXJX-XXX and Type 65-5-XXCX-XXX) and ULTRAFLOW® 34	44
7.6.3	MULTICAL® 803 mounted on ULTRAFLOW®	45
7.6.4	Pulse Transmitter/Pulse Divider	45
7.7	Electrical connections	46
7.7.1	Electrical connection of ULTRAFLOW® and MULTICAL®	46
7.7.2	Electrical connection of Pulse Transmitter and Pulse Divider	46
7.7.2.1	Cable length	49
7.7.2.2	Connection of power supply	49
7.7.2.2.1	Battery supply	49
7.7.2.2.2	Mains supply modules	49
7.7.2.2.3	Mains supply cable	51
7.7.2.2.4	Cable connections	51
7.7.2.2.5	Change of supply unit	51
7.7.3	Electrical connection of Cable Extender Box	52
7.8	Installation examples (electrical)	53
7.8.1	Example of connection of ULTRAFLOW® and MULTICAL®	53
7.8.2	Example of connection of Pulse Transmitter	53
7.8.3	Calculator with two flow sensors	54
7.9	Operational check	55
8	Functional description	56
8.1	Flow measurement with ultrasound	56
8.2	Signal path, flow calculation and flow profiles	56
8.3	Function of ULTRAFLOW®	59

8.4	Pulse emission.....	60
8.5	Supply of ULTRAFLOW®.....	60
8.6	Pulse output of ULTRAFLOW®.....	61
8.7	Pulse output of Pulse Transmitter and Pulse Divider.....	62
8.7.1	Galvanically separated output module (Y=2).....	62
8.7.2	Galvanically separated output module (Y=3).....	63
8.8	Interface connector/serial data.....	64
8.9	Test mode.....	66
8.10	Externally controlled start/stop.....	66
8.11	Calibration using serial data and externally controlled start/stop.....	67
8.12	Accuracy.....	68
9	Calibrating ULTRAFLOW®.....	70
9.1	Technical data for ULTRAFLOW®.....	70
9.2	Electrical connection.....	71
9.3	Suggested test points.....	72
9.4	Optimization in connection with calibration.....	73
9.5	Pulse Tester.....	75
9.5.1	Technical data for Pulse Tester.....	75
9.5.2	Hold function.....	77
9.5.3	Push-button functions.....	77
9.5.4	Use of Pulse Tester.....	77
9.5.5	Spare parts.....	78
9.5.6	Battery replacement.....	78
9.6	NOWA.....	78
9.7	Sealing.....	79
10	Software for Kamstrup heat/cooling meters.....	82
11	Approvals.....	83
11.1	MID and DK-BEK 1178 – 06/11/2014.....	83
11.2	CE marking.....	83
12	Troubleshooting.....	84
13	Disposal.....	85
14	Documents.....	86

1 General description

ULTRAFLOW® is a static flow sensor. It is used as a volume flow rate sensor primarily for energy meters such as MULTICAL®. ULTRAFLOW® 54 has been designed for use in heating installations where water is the heat-bearing medium, whereas ULTRAFLOW® 34 has been designed for use in cooling and heat/cooling installations where water is the energy-bearing medium.

Flow measuring in ULTRAFLOW® is based on ultrasonic measuring and microprocessor technique. A single-board construction comprises all calculating and flow measuring circuits, which provides a compact and rational design and, in addition, exceptionally high measuring accuracy and reliability are obtained. The volume is measured using bidirectional ultrasonic technique based on the transit time method, which has proven to be a long-term stable and accurate measuring principle. Through two ultrasonic transducers, the sound signal is sent both with and against the flow. The ultrasonic signal travelling with the flow reaches the opposite transducer first, and the time difference between the two signals can be converted into average flow velocity and thereby to volume flow rate and volume.

A three-wire signal cable is used to connect ULTRAFLOW® to the calculator. The cable transfers the signal to the calculator and also supplies the flow sensor. The transmitted signal corresponds to the flow and consists of a number of pulses, which is proportional to the quantity of water having passed through the sensor (volume).

When ULTRAFLOW® is used as a volume flow rate sensor for MULTICAL®, ULTRAFLOW® is supplied by MULTICAL®. ULTRAFLOW® can be connected directly with MULTICAL® by a cable length of up to 10 m. When there is a need to extend the cable between ULTRAFLOW® and MULTICAL®, a Cable Extender Box can be used, which is mounted between ULTRAFLOW® and MULTICAL® to extend the cable up to 30 m. Note that ULTRAFLOW® and MULTICAL® in these cases are not galvanically separated.

If you would like to use another calculator than MULTICAL®, the connection between ULTRAFLOW® and the calculator must normally be carried out through a Pulse Transmitter. If ULTRAFLOW® is connected to a another calculator with a different meter factor than the one supplied by ULTRAFLOW®, a Pulse Divider is used instead. Pulse Transmitter and Pulse Divider are available with built-in supply for ULTRAFLOW®.

In addition, Pulse Transmitter and Pulse Divider use a cable length of up to 100 m between ULTRAFLOW® and MULTICAL®, which is required in some installations. The pulse outputs of both Pulse Transmitter and Pulse Divider are galvanically separated.

2 Data

ULTRAFLOW® 54 and ULTRAFLOW® 34

2.1 Electrical data

Supply voltage	3.6 VDC ±0.1 VDC	
Battery (Pulse Transmitter/ Pulse Divider)	3.65 VDC, D-cell lithium	
Replacement interval	6 years @ $t_{BAT} < 30\text{ °C}$	With output module (Y=3)
Mains supply (Pulse Transmitter/ Pulse Divider)	230 VAC +15/-30 %, 50 Hz 24 VAC ±50 %, 50 Hz	
Power consumption, mains supply	< 1 W	
Backup mains supply	Integral SuperCap eliminates interruptions due to short-term power failures	
Cable length, Flow sensor	Max 10 m	
Pulse Transmitter/ Pulse Divider	Depending on calculator. Max 100 m when connected to MULTICAL® (Y = 2)	
Cable Extender Box	Depending on calculator. Max 30 m when connected to MULTICAL® 603 or 803	
EMC data	Fulfil EN 1434:2015 class C, MID E1 and E2	

2.2 Mechanical data

Metrological class	2 or 3	
Environmental class	Fulfil EN 1434 class C	
Mechanical environment	MID M1 and M2 (M2 only flow sensor type 65-5-XXHX-XXX)	
Ambient temperature	5...55 °C non-condensing, closed location (installation indoors)	
Protection class		
Flow sensor	IP65	When properly installed.
Pulse Transmitter/ Pulse Divider	IP67	See paragraph 7 <i>Installation</i> .
Cable Extender Box	IP 65	
Humidity		
ULTRAFLOW® 54	Non-condensing, < 93 % RH	
ULTRAFLOW® 34	Condensing (periodically)	
Medium in flow sensor	Water – recommended water quality as described in CEN TR 16911 and AGFW FW510	
Temperature of medium		
ULTRAFLOW® 54	15...130 °C	At medium temperatures above 90°C, the use of flange meters is recommended.
ULTRAFLOW® 34	2...130 °C or 2...50 °C	
		At medium temperatures above 90 °C or below the ambient temperature, the calculator and Pulse Transmitter/Pulse Divider must not be mounted on the flow sensor. Instead wall mounting is recommended.
Storage and transport temperature, empty sensor	-25...60 °C	
Pressure stage	PN16, PS16 and PN25, PS25	

2.3 Flow data

Nom. flow q_p [m ³ /h]	Meter factor ¹⁾ [pulses/l]	Dynamic range $q_p:q_i$	$q_s:q_p$	Flow @125 Hz ²⁾ [m ³ /h]	Min. cutoff [l/h]
0.6 ³⁾	300	100:1	2:1	1.5	2
1.5	100	100:1	2:1	4.5	3
2.5	60	100:1	2:1	7.5	5
3.5	50	100:1	2:1	9	7
6	25	100:1	2:1	18	12
10	15	100:1	2:1	30	20
15	10	100:1	2:1	45	30
25	6	100:1	2:1	75	50
40	5	100:1	2:1	90	80
60	2.5	100:1	2:1	180	120
100	1.5	100:1	2:1	300	200

¹⁾ The meter factor appears from the type label.

²⁾ Saturation flow 125 Hz. Max. pulse frequency is maintained at higher flow.

³⁾ Only available as ULTRAFLOW® 54.

Table 1. Flow data.

2.4 Materials

Wetted parts, ULTRAFLOW® 54/34

Housing, threaded	DZR brass (dezincification resistant brass), CW602N
Housing, flanged	Stainless steel, W.Nr. 1.4308
Transducer	Stainless steel, W.Nr. 1.4401
Gaskets	EPDM
Reflectors	Thermoplastic, PES 30 % GF and stainless steel, W.Nr. 1.4301 (q _p 1.5 m ³ /h and 65-5-XXHX-XX)/Stainless steel, W.Nr. 1.4301
Measuring tube	Thermoplastic, PES (65-5-XXHX-XXX)/PES 30 % GF

Electronics case, ULTRAFLOW® 54/34

Base	Thermoplastic, PES 30 % GF (65-5-XXHX-XXX)/Thermoplastic, PC 10 % GF
Cover	Thermoplastic, PC 10 % GF (65-5-XXHX-XXX)/Thermoplastic, PC 20 % GF

Housing, Pulse Transmitter/Pulse Divider

Base, cover	Thermoplastic, PC 10 % GF
-------------	---------------------------

Signal cable

Silicone cable (3 x 0.25 mm²)

Mains supply cable 24/230 VAC (optional when selecting mains-supplied Pulse Transmitter/ Pulse Divider)

Cable with PVC-mantle (2 x 0.75 mm²)

Housing, Cable Extender Box

Base, cover	Thermoplastic, ABS
-------------	--------------------

3 Type overview

3.1 ULTRAFLOW® 54

Nom. flow q_p [m³/h]	Installation dimensions					
0.6	G¾Bx110 mm	G1Bx130 mm	(G1Bx190 mm)			
1.5	G¾Bx110 mm	G¾Bx165 mm	G1Bx130 mm	G1Bx190 mm	(G1Bx110 mm)	(DN20x190 mm)
2.5	G1Bx190 mm	DN20x190 mm	(G1Bx130 mm)			
3.5	G5/4Bx260 mm	DN25x260 mm	(G5/4Bx135 mm)	(G5/4Bx150 mm)		
6	G5/4Bx260 mm	G1½Bx260 mm	DN25x260 mm	DN32x260 mm	(G5/4Bx135 mm)	(G5/4Bx150 mm)
10	G2Bx300 mm	DN40x300 mm	(G2Bx200 mm)			
15	DN50x270 mm	(DN50x250 mm)				
25	DN65x300 mm					
40	DN80x300 mm	(DN80x350 mm)				
60	DN100x360 mm	(DN100x400 mm)				
100	DN100x360 mm	DN125x350 mm				

(...) Country specific variants

Table 2. Type overview of ULTRAFLOW® 54.

Thread EN ISO 228-1

Flange facing type B, raised face in accordance with EN 1092-1, PN25

3.2 ULTRAFLOW® 34

Nom. flow q_p [m³/h]	Installation dimensions		
1.5	G¾Bx110 mm	G1Bx130 mm	G1Bx190 mm
2.5	G1Bx190 mm		
3.5	G5/4Bx260 mm		
6	G5/4Bx260 mm	DN25x260 mm	
10	G2Bx300 mm	DN40x300 mm	
15	DN50x270 mm		
25	DN65x300 mm		
40	DN80x300 mm		
60	DN100x360 mm		
100	DN100x360 mm	DN125x350 mm	

Table 3. Type overview of ULTRAFLOW® 34.

Thread EN ISO 228-1

Flange facing type B, raised face in accordance with EN 1092-1, PN25

4 Ordering details

4.1 ULTRAFLOW® 54

Type number ¹⁾	q _p [m ³ /h]	q _i [m ³ /h]	q _s [m ³ /h]	Connection	Length [mm]	PN [bar]	Meter factor [pulses/l]	Material (Housing)
65-5-CAHA-XXX	0.6	0.006	1.2	G¾B (R½)	110	16/25	300	Brass
65-5-CAHD-XXX	0.6	0.006	1.2	G1B (R¾)	130	16/25	300	Brass
(65-5-CAHF-XXX)	0.6	0.006	1.2	G1B (R¾)	190	16/25	300	Brass
65-5-CDHA-XXX	1.5	0.015	3	G¾B (R½)	110	16/25	100	Brass
65-5-CDHC-XXX	1.5	0.015	3	G¾B (R½)	165	16/25	100	Brass
(65-5-CDH1-XXX)	1.5	0.015	3	G1B (R¾)	110	16	100	Brass
(65-5-CDH2-XXX) ²⁾	1.5	0.015	3	G¾B (R½)	165	16/25	100	Brass
65-5-CDHD-XXX	1.5	0.015	3	G1B (R¾)	130	16/25	100	Brass
65-5-CDHF-XXX	1.5	0.015	3	G1B (R¾)	190	16/25	100	Brass
(65-5-CDCA-XXX)	1.5	0.015	3	DN20	190	25	100	Stainless steel
(65-5-CEHD-XXX)	2.5	0.025	5	G1B (R¾)	130	16/25	60	Brass
65-5-CEHF-XXX	2.5	0.025	5	G1B (R¾)	190	16/25	60	Brass
65-5-CECA-XXX	2.5	0.025	5	DN20	190	25	60	Stainless steel
(65-5-CGJ6-XXX)	3.5	0.035	7	G5/4B (R1)	135	16/25	50	Brass
(65-5-CGJ7-XXX)	3.5	0.035	7	G5/4B (R1)	150	16/25	50	Brass
65-5-CGJG-XXX	3.5	0.035	7	G5/4B (R1)	260	16/25	50	Brass
65-5-CGCB-XXX	3.5	0.035	7	DN25	260	25	50	Stainless steel
(65-5-CHJ6-XXX)	6	0.06	12	G5/4B (R1)	135	16/25	25	Brass
(65-5-CHJ7-XXX)	6	0.06	12	G5/4B (R1)	150	16/25	25	Brass
65-5-CHJG-XXX	6	0.06	12	G5/4B (R1)	260	16/25	25	Brass
65-5-CHJH-XXX	6	0.06	12	G1½B (R5/4)	260	16/25	25	Brass
65-5-CHCB-XXX	6	0.06	12	DN25	260	25	25	Stainless steel
65-5-CHCC-XXX	6	0.06	12	DN32	260	25	25	Stainless steel
(65-5-CJJ8-XXX)	10	0.1	20	G2B (R1½)	200	16/25	15	Brass
65-5-CJJJ-XXX	10	0.1	20	G2B (R1½)	300	16/25	15	Brass
65-5-CJCD-XXX	10	0.1	20	DN40	300	25	15	Stainless steel
(65-5-CKC4-XXX)	15	0.15	30	DN50	250	(16)/25	10	Stainless steel
65-5-CKCE-XXX	15	0.15	30	DN50	270	25	10	Stainless steel
65-5-CLCG-XXX	25	0.25	50	DN65	300	25	6	Stainless steel
65-5-CMCH-XXX	40	0.4	80	DN80	300	25	5	Stainless steel
(65-5-CMCJ-XXX)	40	0.4	80	DN80	350	(16)/25	5	Stainless steel
65-5-FACL-XXX	60	0.6	120	DN100	360	25	2.5	Stainless steel
(65-5-FAD5-XXX)	60	0.6	120	DN100	400	16	2.5	Stainless steel
65-5-FBCL-XXX	100	1	200	DN100	360	25	1.5	Stainless steel
65-5-FBCM-XXX	100	1	200	DN125	350	25	1.5	Stainless steel

¹⁾ XXX - code for final assembly, approvals etc. - determined by Kamstrup. A few variants may not be available in national approvals.

²⁾ Flow sensor is prepared for mounting of two temperature sensors for permanent performance monitoring applications. (...). Country specific variants

Table 4. Type numbers of ULTRAFLOW® 54.

By separate order of ULTRAFLOW® and MULTICAL®, see also the Technical descriptions of MULTICAL® 602/603/801/803 (5512-931_GB/5512-2029_GB/5512-571_GB/5512-2360_GB) for information on valid CCC codes in the calculator.

4.2 ULTRAFLOW® 34

Type number ¹⁾	q _p [m ³ /h]	q _i [m ³ /h]	q _s [m ³ /h]	Connection	Length [mm]	PN [bar]	Meter factor [pulses/l]	Material (Housing)
65-3- CDAA -XXX	1.5	0.015	3	G¾B (R½)	110	16/25	100	Brass
65-3- CDAD -XXX	1.5	0.015	3	G1B (R¾)	130	16/25	100	Brass
65-3- CDAF -XXX	1.5	0.015	3	G1B (R¾)	190	16/25	100	Brass
65-3- CEAF -XXX	2.5	0.025	5	G1B (R¾)	190	16/25	60	Brass
65-3- CGAG -XXX	3.5	0.035	7	G5/4B (R1)	260	16/25	50	Brass
65-3- CHAG -XXX	6	0.06	12	G5/4B (R1)	260	16/25	25	Brass
65-3- CHCB -XXX	6	0.06	12	DN25	260	25	25	Stainless steel
65-3- CJAJ -XXX	10	0.1	20	G2B (R1½)	300	16/25	15	Brass
65-3- CJCD -XXX	10	0.1	20	DN40	300	25	15	Stainless steel
65-3- CKCE -XXX	15	0.15	30	DN50	270	25	10	Stainless steel
65-3- CLCG -XXX	25	0.25	50	DN65	300	25	6	Stainless steel
65-3- CMCH -XXX	40	0.4	80	DN80	300	25	5	Stainless steel
65-3- FACL -XXX	60	0.6	120	DN100	360	25	2.5	Stainless steel
65-3- FBCL -XXX	100	1	200	DN100	360	25	1.5	Stainless steel
65-3- FBCM -XXX	100	1	200	DN125	350	25	1.5	Stainless steel

¹⁾ XXX - code for final assembly, approvals etc. - determined by Kamstrup. A few variants may not be available in national approvals.

Table 5. Type numbers of ULTRAFLOW® 34.

4.3 Accessories for ULTRAFLOW®

To supplement the meter program, Kamstrup can per order deliver couplings and gaskets as accessories. All couplings and gaskets for couplings as well as flange gaskets up to and including DN80 are suitable for both PN16 and PN25. Flange gaskets DN100 and DN125 are suitable for PN25 only due to their physical dimension. Gaskets are not marked with the pressure stage.

Note: Accessories are not necessarily relevant to all flow sensors in the ULTRAFLOW® X4 product range.

Couplings PN16/PN25				
Size	Nipple	Union	Type No.	
			1 pc.	2 pcs.
DN15	R½	G¾	-	6561-323
DN20	R¾	G1	-	6561-324
DN25	R1	G5/4	6561-325	-
DN32	R5/4	G1½	6561-314	-
DN40	R1½	G2	6561-315	-

Table 6. Couplings including gaskets (PN16/PN25).

Gaskets for couplings PN16/PN25		Gaskets for flange meters PN25	
Size (union)	Type No.	Size	Type No.
G¾	2210-061	DN20	2210-147
G1	2210-062	DN25	2210-133
G5/4	2210-063	DN32	2210-217
G1½	2210-064	DN40	2210-132
G2	2210-065	DN50	2210-099
		DN65	2210-141
		DN80	2210-140
		DN100	1150-142
		DN125	1150-153

Table 7. Separate gaskets for the couplings and flange meters (PN16/PN25).

Article number	Description	Note
2101-147	Blind plug for ULTRAFLOW®	Excl. O-ring 1150-132
1150-132	O-ring for blind plug 2101-147	
2210-131	Gasket for short direct temperature sensor, 1 pc.	
3026-858	Angle bracket for ULTRAFLOW®	For type 65-5-XXHX-XXX
3026-252	Angle bracket for ULTRAFLOW®	For type 65-5-XXAX-XXX, 65-5-XXCX-XXX and 65-5-XXJX-XXX.

Table 8. Accessories for ULTRAFLOW®

4.4 Pulse Transmitter / Pulse Divider and Cable Extender Box

4.4.1 Introduction

Depending on the application of ULTRAFLOW®, galvanic separation, adaptation of meter factor to a foreign calculator or a longer cable between ULTRAFLOW® and MULTICAL® can become necessary. Pulse Transmitter, Pulse Divider and Cable Extender Box are electronic equipment that are installed between ULTRAFLOW® and the calculator and provide various technical solutions for these purposes.

Pulse Transmitter and Pulse Divider are available with built-in supply for ULTRAFLOW®. By default, Pulse Transmitter/Pulse Divider is supplied by a built-in battery. Alternatively, Pulse Transmitter/Pulse Divider is externally supplied by 24 VAC or 230 VAC.

Pulse Transmitter and Pulse Divider are available with galvanically separated output module. See paragraph 4.4.3 below.


Galvanic separation is used in the following situations:

- 1) If a cable length of more than 10 m is required between MULTICAL® and ULTRAFLOW®
- 2) For flow sensor no. 2 in connection with MULTICAL®. If two flow sensors are used together with MULTICAL®, one must be galvanically separated.
For further information, see paragraph 7.8.3 *Calculator with two flow sensors*.
- 3) If ULTRAFLOW® is connected to other equipment/foreign calculators.

Note: Due to the galvanic separation, flow-info is not available if Pulse Transmitter or Pulse Divider is used.

When mounting the Pulse Transmitter or Pulse Divider between ULTRAFLOW® and MULTICAL®, the cable length can be extended up to 100 m depending on the calculator. See paragraph 4.4.2 and 4.4.3 for more information. In the case where galvanic separation is not necessary and flow-info is required, the Cable Extender Box enables an extension of the cable length between ULTRAFLOW® and MULTICAL® up to max 30 m. For more information see paragraph 4.4.7.

4.4.2 Type number composition of Pulse Transmitter and Pulse Divider

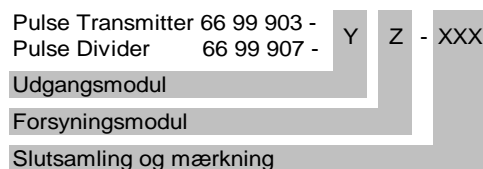

4.4.3 Output module and supply module

Y	Output module	Corresponding supply module
2	Galvanically separated module	0, 7, 8
3	Galvanically separated module, low power	0, 2, 7, 8

Z	Supply module	Corresponding output module
0	No supply	2, 3
2	Battery, D-cell	3
7	230 VAC supply module	2, 3
8	24 VAC supply module	2, 3

Table 9. Output module (Y) and supply module (Z) for Pulse Transmitter and Pulse Divider.

Pulse Transmitter and Pulse Divider are available with one of two different galvanically separated output modules.

Output module (Y=2) is used when extra-long cables are required. When connecting to MULTICAL®, a DC supply is required as shown in *Figure 32 to Figure 35, pages 47 and 48*. (See also the Technical description of MULTICAL®, Flow sensor with active 24 V pulse output). For output module (Y=2), battery supply is not an option.

Output module (Y=3) is intended for battery supply with a minimum battery life of 6 years. Output module (Y=3) is selected by default.

When Pulse Transmitter and Pulse Divider are mains-supplied (24 VAC or 230 VAC) and connected via 3-wire cable to MULTICAL®, both output modules can be used. See *Figure 30 and Figure 31, pages 46 and 47, respectively*.

For further information, see paragraph *7.7.2 Electrical connection of Pulse Transmitter and Pulse Divider*.

4.4.4 Pulse Divider configuration CCC-DD-E-MMM

If ULTRAFLOW® is connected to calculators with different meter factor than the one supplied by ULTRAFLOW®, a Pulse Divider is used.

Pulse Divider must be configured in accordance with *Table 10* for ULTRAFLOW® meter factor (CCC), which is unique for the nominal flow q_p . In addition, the desired meter factor (DD) and pulse length (E) of the Pulse Divider is determined by the connected calculator. MMM indicates selection of customer label.

q_p [m³/h]	CCC	Meter factor				Pulse duration				
		[pulses/l]	[l/pulse]	Divider	DD	[ms] (E=1)	[ms] (E=4)	[ms] (E=5)	[ms] (E=6)	
0.6	116	300				3.9	-	-	-	Default
0.6			1	300	33	-	20	50	100	
0.6			2.5	750	63	-	-	-	100	
1.5	119	100				3.9	-	-	-	Default
1.5			1	100	33	-	20	50	100	
1.5			2.5	250	63	-	-	-	100	
1.5			10	1000	34	-	-	-	100	
2.5	198	60				3.9	-	-	-	Default
2.5			1	60	33	-	20	50	100	
2.5			2.5	150	63	-	-	-	100	
2.5			10	600	34	-	-	-	100	
3.5	151	50				3.9	-	-	-	Default
3.5			1	50	33	-	20	50	-	
3.5			2.5	125	63	-	-	-	100	
3.5			10	500	34	-	-	-	100	
3.5			25	1250	64	-	-	-	100	
6	137	25				3.9	-	-	-	Default
6			1	25	33	-	20	50	-	
6			2.5	62.5	63	-	-	-	100	
6			10	250	34	-	-	-	100	
6			25	625	64	-	-	-	100	
10	178	15				3.9	-	-	-	Default
10			1	15	33	-	20	50	-	
10			10	150	34	-	-	-	100	
10			25	375	64	-	-	-	100	
15	120	10				3.9	-	-	-	Default
15			1	10	33	-	20	-	-	
15			10	100	34	-	-	50	100	
15			25	250	64	-	-	-	100	
15			100	1000	35	-	-	-	100	
25	179	6				3.9	-	-	-	Default
25			1	6	33	-	20	-	-	
25			10	60	34	-	-	50	100	
25			25	150	64	-	-	-	100	
25			100	600	35	-	-	-	100	

Table 10. Configuration variants of meter factor (DD) and pulse duration (E) for Pulse Divider for ULTRAFLOW® X4, q_p 0.6...25 m³/h.

Based on a q_p -value, one of the meter factor options for the Pulse Divider is selected from *Table 10*. The pulse duration options appear from the same line as the selected meter factor.

Example: For ULTRAFLOW® X4 with q_p 1.5 m³/h (100 imp/l, CCC=119), a meter factor of 1 l/pulse (DD=33) for the Pulse Divider is required. Based on this meter factor, you have the option of pulse durations 20 (E=4), 50 (E=5) or 100 (E=6) milliseconds.

q _p [m³/h]	CCC	Meter factor				Pulse duration				
		[pulses/l]	[l/pulse]	Divider	DD	[ms] (E=1)	[ms] (E=4)	[ms] (E=5)	[ms] (E=6)	
40	158	5				3.9	-	-	-	Default
40			10	50	34	-	20	50	-	
40			25	125	64	-	-	-	100	
40			100	500	35	-	-	-	100	
40			250	1250	65	-	-	-	100	
60	170	2,5				3.9	-	-	-	Default
60			10	25	34	-	20	50	-	
60			25	62.5	64	-	-	-	100	
60			100	250	35	-	-	-	100	
60			250	625	65	-	-	-	100	
100	180	1,5				3.9	-	-	-	Default
100			10	15	34	-	20	50	-	
100			100	150	35	-	-	-	100	
100			250	375	65	-	-	-	100	

Table 11. Configuration variants of meter factor (DD) and pulse duration (E) for Pulse Divider for ULTRAFLOW® X4, q_p 40...100 m³/h.

Default values in Table 10 and Table 11 indicate meter factors and pulse durations of ULTRAFLOW® X4.

q _p [m³/h]	CCC	Meter factor				Pulse duration				
		[pulses/l]	[l/pulse]	Divider	DD	[ms] (E=1)	[ms] (E=4)	[ms] (E=5)	[ms] (E=6)	
0,6	116	300			70	3.9	-	-	-	Standard
0,6			0,0167	5	41	3,9	-	-	-	
0,6			0,02	6	51	3,9	-	-	-	
0,6			0,04	12	12	3,9	-	-	-	
1,5	119	100			31	3.9	-	-	-	Standard
1,5			0,02	2	51	3,9	-	-	-	
1,5			0,04	4	12	3,9	-	-	-	
1,5			0,1	10	32	3,9	-	-	-	
2,5	198	60			41	3.9	-	-	-	Standard
2,5			0,0667	4	22	3,9	-	-	-	
2,5			0,1	6	32	3,9	-	-	-	
3,5	151	50			51	3.9	-	-	-	Standard
3,5			0,04	2	12	3,9	-	-	-	
3,5			0,1	5	32	3,9	-	-	-	

Table 12. Configuration variants for meter factor (DD) and pulse length (E) with fixed dividers for MULTICAL® 603 applications with two ULTRAFLOW® X4 of different sizes.

q _p [m³/h]	CCC	Meter factor				Pulse duration				
		[pulses/l]	[l/pulse]	Divider	DD	[ms] (E=1)	[ms] (E=4)	[ms] (E=5)	[ms] (E=6)	
0,6	116	300			70	3,9	-	-	-	Standard
0,6			0,0033	1	70	3,9	-	-	-	
1,5	119	100			31	3,9	-	-	-	Standard
1,5			0,01	1	31	3,9	-	-	-	
2,5	198	60			41	3,9	-	-	-	Standard
2,5			0,0167	1	41	3,9	-	-	-	
3,5	151	50			51	3,9	-	-	-	Standard
3,5			0,02	1	51	3,9	-	-	-	
6	137	25			12	3,9	-	-	-	Standard
6			0,04	1	12	3,9	-	-	-	
10	178	15			22	3,9	-	-	-	Standard
10			0,0667	1	22	3,9	-	-	-	
15	120	10			32	3,9	-	-	-	Standard
15			0,1	1	32	3,9	-	-	-	
25	179	6			42	3,9	-	-	-	Standard
25			0,1667	1	42	3,9	-	-	-	
40	158	5			52	3,9	-	-	-	Standard
40			0,2	1	52	3,9	-	-	-	
60	170	2,5			13	3,9	-	-	-	Standard
60			0,4	1	13	3,9	-	-	-	
100	180	1,5			23	3,9	-	-	-	Standard
100			0,6667	1	23	3,9	-	-	-	

Table 13. Configuration variants for meter factor (DD) and pulse length (E) with fixed divider 1 for MULTICAL®. These variants can only be configured via METERTOOL HCW.

4.4.5 Accessories for Pulse Transmitter and Pulse Divider

Note that not all article numbers in *Table 14* can be directly ordered, some must be ordered via our service department (please send an email to service@kamstrup.com).

Article number	Description	Note (when ordering Pulse Transmitter/Pulse Divider)
65-000-000-2000	D-cell lithium battery with two-pole connector	
3026-477 ¹⁾	Fitting for D-cell battery	Enclosed if battery supply or "No supply" is selected
1650-157 ¹⁾	Plug for cable connection	Enclosed if battery supply or "No supply" is selected
65-000-000-7000 ²⁾	230 VAC supply module	
65-000-000-8000 ²⁾	24 VAC supply module	
5000-290	Cable between supply module and output module	Enclosed if supply module is selected
5000-286	24/230 VAC supply cable	Optional
6699-012	Output module (Y=2), galvanically separated 5550-1062	
6699-013	Output module (Y=3), galvanically separated, "Low power" 5550-1219	
5000-333	2.5 m silicone cable (3-wire)	Optional
5000-259	5 m silicone cable (3-wire)	Optional
5000-270	10 m silicone cable (3-wire)	Optional
3026-207.A	Wall bracket including mounting kit	Optional

¹⁾ *Obligatory when changing from mains supply module to battery supply.*

²⁾ *Including 5000-290.*

Table 14. Accessories for Pulse Transmitter and Pulse Divider.

4.4.6 Cables

Pulse Transmitter and Pulse Divider are available with signal cable lengths 2.5; 5 or 10 m. The signal cable is mounted from the factory.

If 24/230 VAC supply module is selected, Pulse Transmitter and Pulse Divider are optionally available with mains supply cable. The cable is mounted from the factory.

4.4.7 Cable Extender Box

Cable Extender Box (Type 6699-036) enables a signal cable length of up to 30 m between ULTRAFLOW® and MULTICAL®. The equipment supports flow-info, but not galvanic separation (for more information see paragraph 4.4.1). Cable Extender Box (Type 6699-036) must be ordered separately.

Kamstrup offers signal cables in lengths of 2.5 m (Type 5000-333), 5 m (Type 5000-259) and 10 m (Type 5000-270), which can be ordered separately. In combination with the signal cables, which are typically delivered with ULTRAFLOW®, different total lengths of up to 20 m between ULTRAFLOW® and MULTICAL® can be realized. With signal cables of varying lengths but of the same quality as Kamstrup's signal cables, it is possible to find individual solutions for cable extension up to 30 m between ULTRAFLOW® and MULTICAL®. For electrical connections, see paragraph 7.7.3.

5 Dimension sketches

All measurements are in mm, unless otherwise stated.

5.1 Threaded meters

5.1.1 ULTRAFLOW® 54 (Type 65-5-XXHX-XXX) – G¾B and G1B

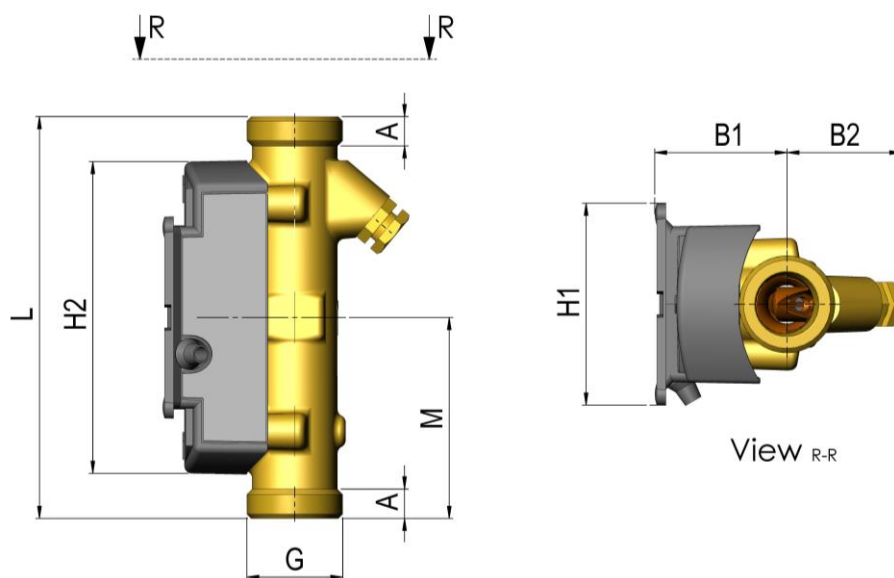


Figure 1. Dimension sketches of ULTRAFLOW® 54 threaded meters type 65-5-XXHX-XXX.

Thread EN ISO 228-1

Thread	L	M	H2	A	B1	B2	H1	Approx. weight [kg]
G¾B (q _p 0.6;1.5)	110	L/2	86	8	37	32	55	0.41
G1B (q _p 1.5)	110	L/2	86	12	37	32	55	0.46
G1B (q _p 0.6;1.5)	130	L/2	86	12	37	32	55	0.51
G1B (q _p 2.5)	130	L/2	86	12	40	35	55	0.53
G¾B (q _p 1.5)	165	L/2	86	8	37	32	55	0.51
G1B (q _p 0.6;1.5)	190	L/2	86	12	37	32	55	0.61
G1B (q _p 2.5)	190	L/2	86	12	40	35	55	0.67

Table 15. Dimensions and weight of ULTRAFLOW® 54 threaded meters type 65-5-XXHX-XXX.

5.1.2 ULTRAFLOW® 54 (Type 65-5-XXIX-XXX) – G1¼B, G1½B and G2B

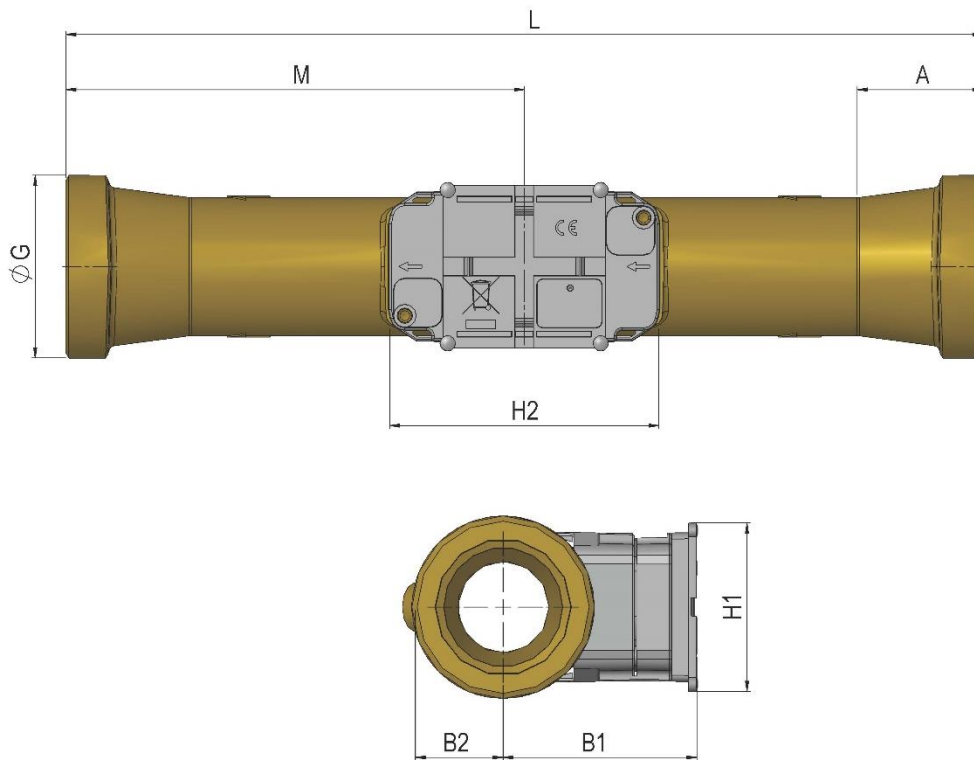


Figure 2. Dimension sketches of ULTRAFLOW® 54 threaded meters type 65-5-XXIX-XXX.

Thread EN ISO 228-1

Thread	L	M	H2	A	B1	B2	H1	Approx. weight [kg]
G5/4 (q _p 3.5; 6.0)	135	63	89	14	58	20	55	0.9
G5/4 (q _p 3.5; 6.0)	150	71	89	14	58	20	55	1.0
G5/4 (q _p 3.5)	260	L/2	89	16	58	20	55	1.5
G5/4 (q _p 6.0)	260	L/2	89	16	60	20	55	1.6
G1½ (q _p 6.0)	260	L/2	89	31	60	24	55	1.7
G2 (q _p 10)	200	85	89	33	63	29	55	1.8
G2 (q _p 10)	300	L/2	89	40.2	63	29	55	2.5

Table 16. Dimensions and weight of ULTRAFLOW® 54 threaded meters type 65-5-XXIX-XXX.

5.1.3 ULTRAFLOW® 34 – G $\frac{3}{4}$ B and G1B

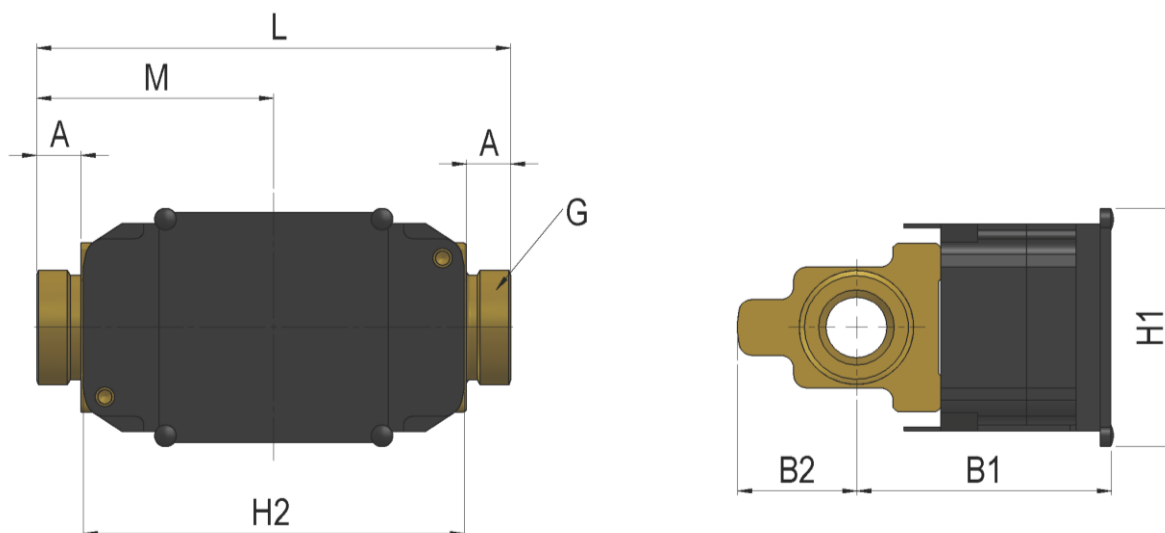


Figure 3. Dimension sketches of ULTRAFLOW® 34 threaded meters G3/4B and G1B.

Thread EN ISO 228-1

Thread	L	M	H2	A	B1	B2	H1	Approx. weight [kg]
G $\frac{3}{4}$ B (q _p 1.5)	110	L/2	89	10.5	58	35	55	0.8
G1B (q _p 1.5)	130	L/2	89	20.5	58	35	55	1.1
G1B (q _p 1.5)	190	L/2	89	20.5	58	35	55	1.5
G1B (q _p 2.5)	190	L/2	89	20.5	58	36	55	1.3

Table 17. Dimensions and weight of ULTRAFLOW® 34 threaded meters G3/4B and G1B.

5.1.4 ULTRAFLOW® 34 – G5/4B and G2B

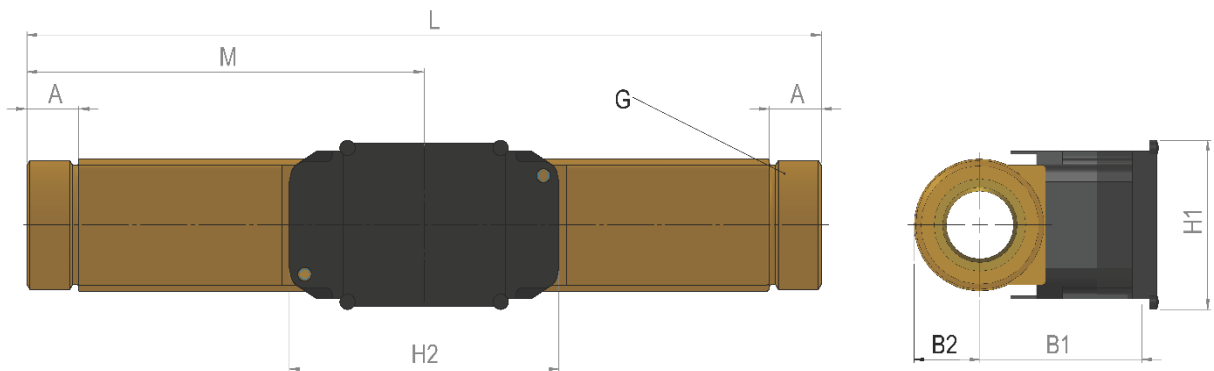


Figure 4. Dimension sketches of ULTRAFLOW® 34 threaded meters G5/4B and G2B.

Thread EN ISO 228-1

Thread	L	M	H2	A	B1	B2	H1	D	Approx. weight [kg]
G5/4B (q _p 3.5; 6)	260	L/2	89	17	58	22	55	∅43	2.3
G2B (q _p 10)	300	L/2	89	21	65	31	55	∅61	4.5

Table 18. Dimensions and weight of ULTRAFLOW® 34 threaded meters G5/4B and G2B.

5.2 Flange meters

5.2.1 ULTRAFLOW® 54/34 – DN20 to DN50

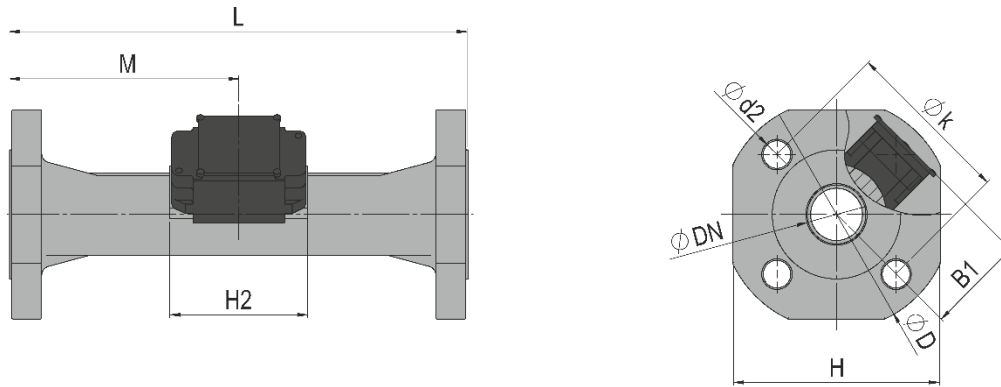


Figure 5. Dimension sketches of ULTRAFLOW® 54/34 flange meters DN20 to DN50.

Flange facing type B, raised face in accordance with EN 1092-1, PN25

Nom. diameter	L	M	H2	B1	D	H	k	Bolts			Approx. weight [kg]
								Number	Thread	d ₂	
DN20 (qp 1.5)	190	L/2	89	58	105	95	75	4	M12	14	3.2
DN20 (qp 2.5)	190	L/2	89	58	105	95	75	4	M12	14	2.9
DN25	260	L/2	89	58	115	106	85	4	M12	14	5.0
DN32	260	L/2	89	<D/2	140	128	100	4	M16	18	5.2
DN40	250	L/2	89	<D/2	150	136	110	4	M16	18	7.9
DN40	300	L/2	89	<D/2	150	136	110	4	M16	18	8.3
DN50	250	155	89	<D/2	165	145	125	4	M16	18	9.8
DN50	270	155	89	<D/2	165	145	125	4	M16	18	10.1

Table 19. Dimensions and weight of ULTRAFLOW® 54/34 flange meters DN20 to DN50.

Note: Some variants shown in Table 19 are only available for ULTRAFLOW® 54 and not for ULTRAFLOW® 34. See available variants in paragraph 4 Ordering details.

5.2.2 ULTRAFLOW® 54/34 – DN65 to DN125

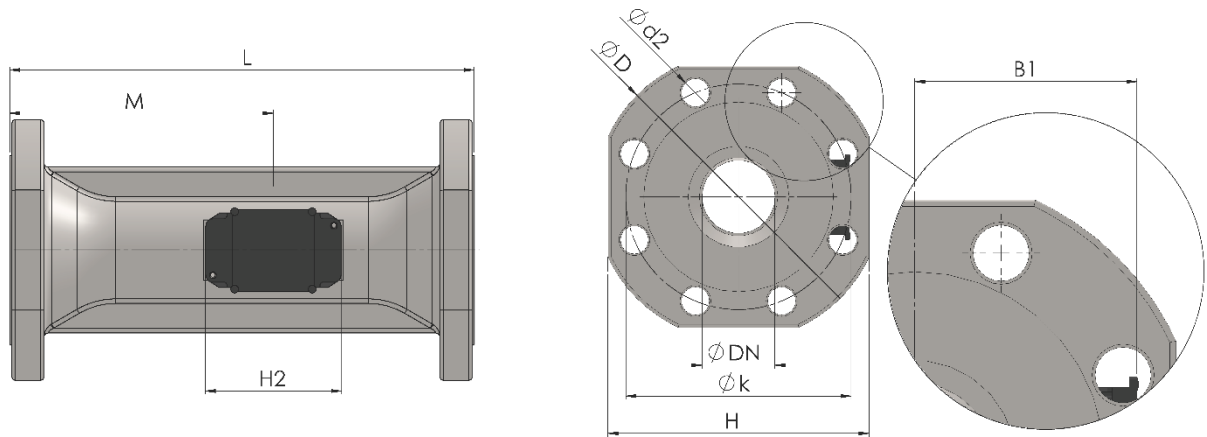


Figure 6. Dimension sketches of ULTRAFLOW® 54/34 flange meters DN65 to DN125.

Flange facing type B, raised face in accordance with EN 1092-1, PN25

Nom. Diameter	L	M	H2	B1	D	H	k	Bolts			Approx. weight [kg]
								Number	Thread	d ₂	
DN65	300	170	89	<H/2	185	168	145	8	M16	18	13.2
DN80	300	170	89	<H/2	200	184	160	8	M16	18	16.8
DN80	350	170	89	<H/2	200	184	160	8	M16	18	18.6
DN100	360	210	89	<H/2	235	220	190	8	M20	22	21.7
DN100	400	210	89	<H/2	220	210	180	8	M16	18	22.8
DN125	350	212	89	<H/2	270	260	220	8	M24	26	28.2

Table 20. Dimension and weight of ULTRAFLOW® 54/34 flange meters DN65 to DN125.

Note: Some variants shown in Table 20 are only available for ULTRAFLOW® 54 and not for ULTRAFLOW® 34. See available variants in paragraph 4 Ordering details.

5.3 Pulse Transmitter and Pulse Divider

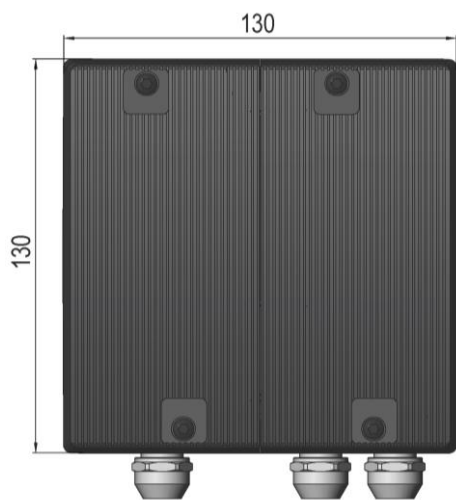


Figure 7. Pulse Transmitter/Pulse Divider seen from the front.



Figure 8. Pulse Transmitter/Pulse Divider seen from the side.

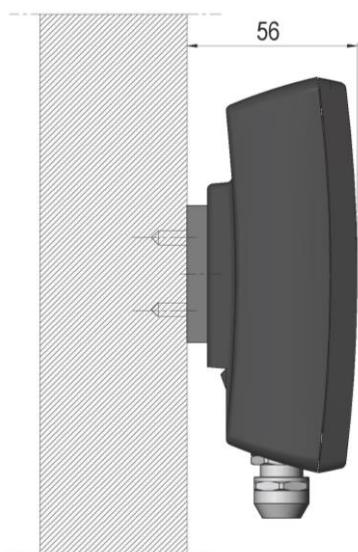


Figure 9. Wall-mounted Pulse Transmitter/Pulse Divider.

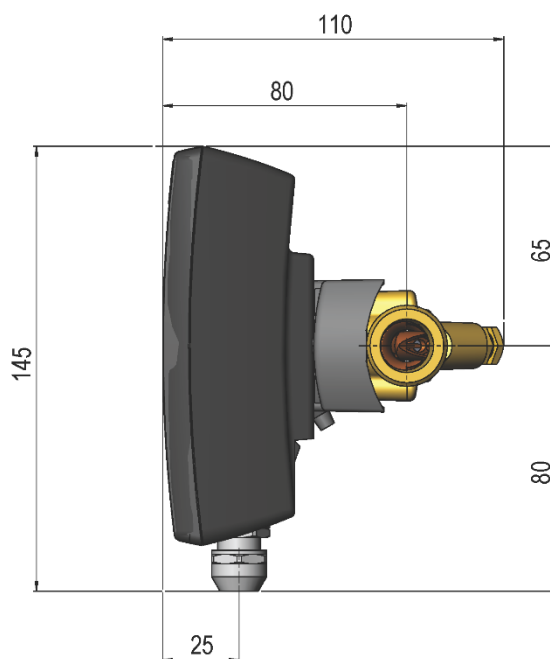


Figure 10. Pulse Transmitter/Pulse Divider mounted on ULTRAFLOW® 54 (Type 65-5-XXHX-XXX).

5.4 Cable Extender Box

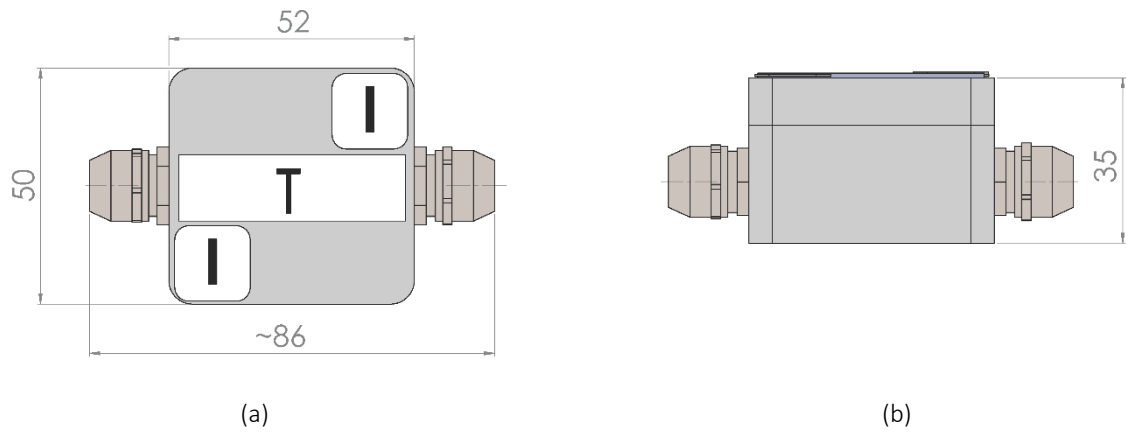


Figure 11. Cable Extender Box seen from the front (a) and from the side (b).

6 Pressure loss

Pressure loss in a flow sensor is stated as maximum pressure loss at q_p . According to EN 1434, max pressure loss must not exceed 0.25 bar, unless the energy meter includes a flow controller or functions as a pressure reducing equipment.

The pressure loss increases with the square of the flow and is usually stated as a direct proportionality between the flow and the square root of the pressure loss:

$$\Delta p = \frac{1}{k_v^2} q^2 \Leftrightarrow q = k_v \times \sqrt{\Delta p}$$

where:

$$q = \text{volume flow rate } [q] = \frac{m^3}{h}$$

$$k_v = \text{volume flow rate at 1 bar pressure loss } [k_v] = \frac{m^3}{h \cdot \sqrt{\text{bar}}}$$

$$\Delta p = \text{pressure loss } [\Delta p] = \text{bar}; 1 \text{ bar} = 10^5 \text{ Pa}$$

6.1 Pressure loss ULTRAFLOW® 54

Graph	q _p [m³/h]	Typenumber ¹⁾			Connection	Length [mm]	Δp@q _p [bar]	k _v	q@0,25 bar [m³/h]
A	0.6	65-5-	CAHA	-XXX	G¾B (R½)	110	0.03	3.5	1.7
		65-5-	CAHD	-XXX	G1B (R¾)	130			
		(65-5-	CAHF	-XXX)	G1B (R¾)	190			
B	1.5	65-5-	CDHA	-XXX	G¾B (R½)	110	0.09	4.9	2.4
		65-5-	CDHC	-XXX	G¾B (R½)	165			
		(65-5-	CDH1	-XXX)	G1B (R¾)	110			
		(65-5-	CDH2	-XXX) ²⁾	G¾B (R½)	165			
		65-5-	CDHD	-XXX	G1B (R¾)	130			
65-5-	CDHF	-XXX	G1B (R¾)	190					
B1	1.5	(65-5-	CDCA	-XXX)	DN20	190	0.22	3.2	1.6
C	2.5	(65-5-	CEHD	-XXX)	G1B (R¾)	130	0.09	8.2	4.1
		65-5-	CEHF	-XXX	G1B (R¾)	190			
D	2.5	65-5-	CECA	-XXX	DN20	190	0.03	13.4	6.8
	3.5	(65-5-	CGJ6	-XXX)	G5/4B (R1)	135	0.07		
		(65-5-	CGJ7	-XXX)	G5/4B (R1)	150			
		65-5-	CGJG	-XXX	G5/4B (R1)	260			
	6	65-5-	CGCB	-XXX	DN25	260	0.20		
		(65-5-	CHJ6	-XXX)	G5/4B (R1)	135			
(65-5-		CHJ7	-XXX)	G5/4B (R1)	150				
E	6	65-5-	CHCC	-XXX	DN32	260	0.06	24.5	12.3
		65-5-	CHJG	-XXX	G5/4B (R1)	260			
		65-5-	CHJH	-XXX	G1½B (R5/4)	260			
F	10	65-5-	CHCB	-XXX	DN25	260	0.06	40	20
		(65-5-	CJJ8	-XXX)	G2B (R1½)	200			
		65-5-	CJJJ	-XXX	G2B (R1½)	300			
	65-5-	CJCD	-XXX	DN40	300				
15	(65-5-	CKC4	-XXX)	DN50	250	0.14			
	65-5-	CKCE	-XXX	DN50	270				
G	25	65-5-	CLCG	-XXX	DN65	300	0.06	102	51
H	40	65-5-	CMCH	-XXX	DN80	300	0.05	179	90
		(65-5-	CMCJ	-XXX)	DN80	350			
J	60	65-5-	FACL	-XXX	DN100	360	0.03	373	187
		(65-5-	FAD5	-XXX)	DN100	400			
	100	65-5-	FBCL	-XXX	DN100	360	0.07	373	187
		65-5-	FBCM	-XXX	DN125	350			

¹⁾ XXX - code for final assembly, approvals etc. - determined by Kamstrup. A few variants may not be available in national approvals.

²⁾ Flow sensor is prepared for mounting of two temperature sensors for permanent performance monitoring applications.

(...) Country specific variants

Table 21. Pressure loss table of ULTRAFLOW® 54.

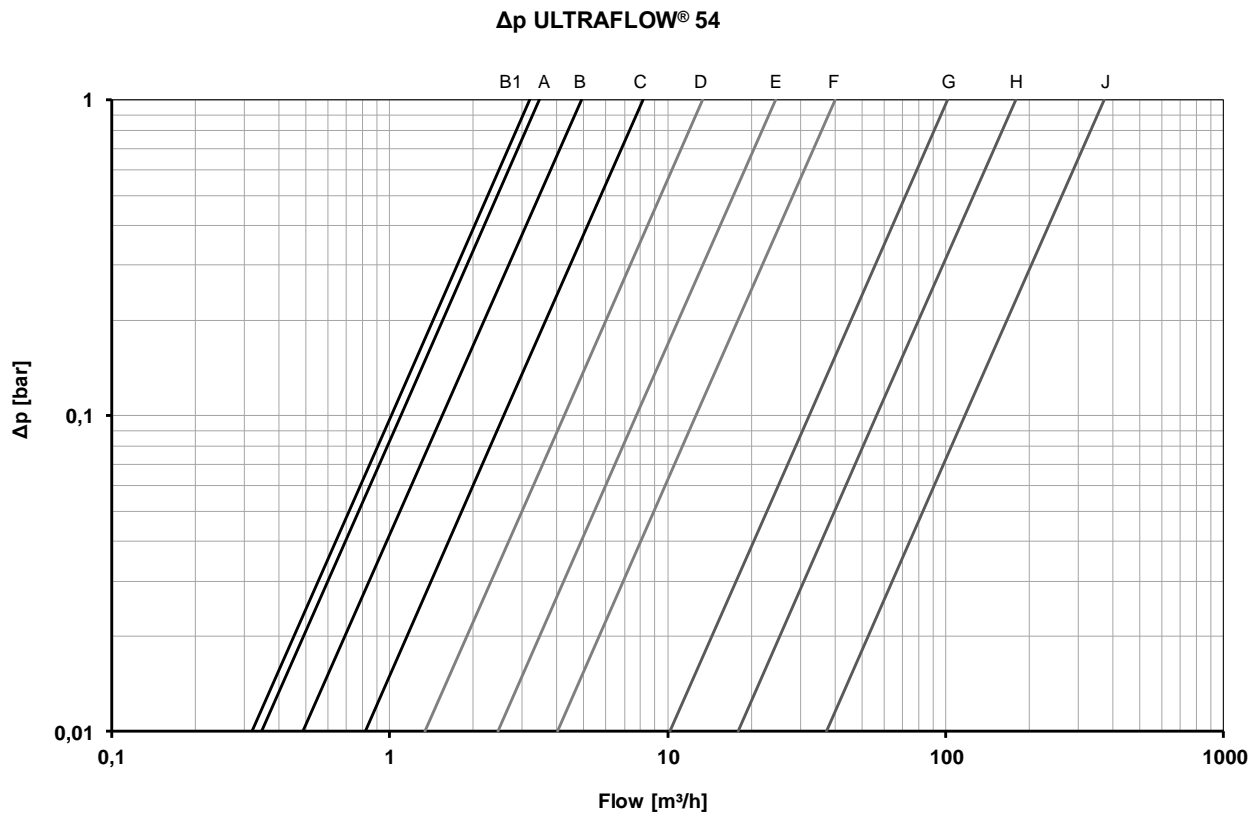


Figure 12. Pressure loss diagram of ULTRAFLOW® 54.

6.2 Pressure loss ULTRAFLOW® 34

Graph	q _p [m³/h]	Nom. diameter [mm]	Δp@q _p [bar]	k _v	q@0.25 bar [m³/h]
A	1.5	DN15/DN20	0.22	3.2	1.6
B	2.5	DN20	0.03	13.4	6.7
B	3.5	DN25	0.07	13.4	6.7
B	6	DN25	0.20	13.4	6.7
C	10	DN40	0.06	40	20
C	15	DN50	0.14	40	20
D	25	DN65	0.06	102	51
E	40	DN80	0.05	179	90
F	60	DN100	0.03	373	187
F	100	DN100/DN125	0.07	373	187

Table 22. Pressure loss table of ULTRAFLOW® 34.

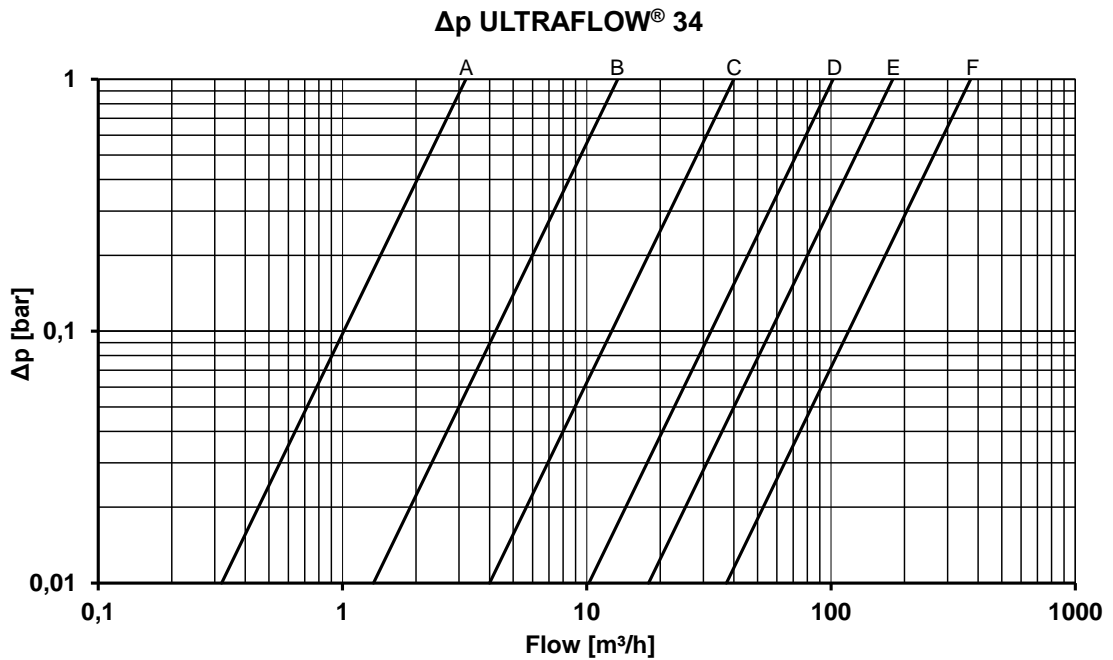


Figure 13. Pressure loss diagram of ULTRAFLOW® 34.

7 Installation

7.1 Introduction

Please read this chapter carefully before installing the meter.

In case of incorrect mounting, Kamstrup's guarantee obligations no longer apply.

By connecting to 230 V supply, there is a risk of electric shock.

When working on the flow sensor in the installation, there is a risk of outflow of (hot) water under pressure.

At a media temperature higher than 60 °C, the flow sensor should be shielded from unintended contact.

Prior to installation of the flow sensor, the system should be flushed. The meter must be suitable for the foreseeable operating conditions in the installation:

Pressure stage ULTRAFLOW® 54/34: PN16/PN25, see labelling. The labelling of the flow sensor also covers accessories included such as couplings and gaskets as well as the blind plug.

Medium temperature ¹⁾, ULTRAFLOW® 54: 15...130 °C or narrower range, see labelling.

Medium temperature ¹⁾, ULTRAFLOW® 34: 2...130 °C or narrower range, see labelling.

¹⁾ At medium temperatures above 90 °C or below the ambient temperature, calculator and Pulse Transmitter/Pulse Divider must not be mounted on the flow sensor. Instead wall-mounting is recommended. See *Table 14 Accessories for Pulse Transmitter and Pulse Divider*.

Mechanical environment: M1 – fixed installation with minimal vibration – and M2 – fixed installation with significant or high vibration level (M2 only flow sensor type 65-5-XXHX-XXX).

Electromagnetic environment: E1 and E2 (housing / light industry and industry). The meter's signal cables must be drawn at min. 25 cm distance from other installations.

Climatic environment: Installation must take place in environments with non-condensing humidity (< 93 % RF) and in closed locations (indoors).

Ambient temperature: The ambient temperature must be within 5...55 °C.

Static pressure ²⁾ at ULTRAFLOW® outlet: To prevent cavitation, the static pressure at the flow sensor outlet must be min. 1.5 bar (1.0 bar for ULTRAFLOW® 54 type 65-5-XXHX-XXX) at q_p and min. 2.5 bar (2.0 bar for ULTRAFLOW® 54 type 65-5-XXHX-XXX) at q_s . This applies to temperatures up to approx. 80 °C.

²⁾ ULTRAFLOW® must not be exposed to pressure lower than the ambient pressure (vacuum).

7.1.1 Guidelines for dimensioning ULTRAFLOW®

In connection with installations, it has proved practical to work with a static pressure at the flow sensor outlet of min. 1.5 bar (1.0 bar for ULTRAFLOW® 54 type 65-5-XXHX-XXX) at q_p and min. 2.5 bar (2.0 bar for ULTRAFLOW® 54 type 65-5-XXHX-XXX) at q_s . This minimises the risk of measuring errors as a result of cavitation or air in the water.

It is not necessarily cavitation in the sensor itself, but also bubbles from cavitating pumps and regulating valves mounted before the sensor. It can take some time until such bubbles have been dissolved in the water. Furthermore, water can include air which is dissolved in the water. The amount of air which can be dissolved in water depends on pressure and temperature. This means that air bubbles can be formed due to a decrease in pressure, e.g. caused by a velocity rise in a pipe contraction or in the sensor. The risk of these factors affecting accuracy is reduced by maintaining a suitable pressure in the system.

In relation to the recommended static pressure, the steam pressure at the current temperature must also be considered. The recommended static pressure applies to temperatures up to approx. 80 °C.

The steam pressure is the pressure where steam and liquid are in equilibrium at the current temperature (boiling point at a given pressure). At low temperature and high pressure, water is in the liquid phase. At high temperature and low pressure, water is in the steam phase. The blue curve (the steam pressure curve) in *Figure 14* thus characterizes the equilibrium of the liquid and steam phases. This means that the static pressure in water must be increased at a given temperature to avoid the steam phase that is shown in the lower right corner of the graph in *Figure 14*.

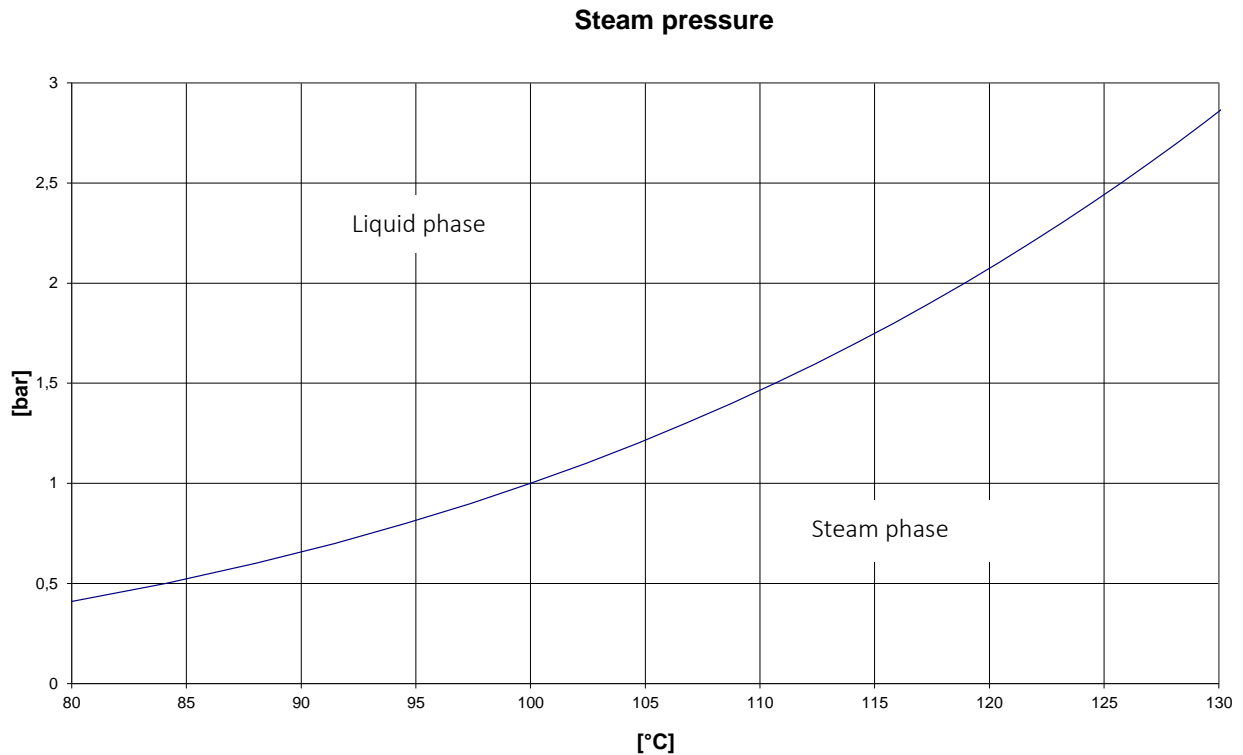


Figure 14. Steam pressure of water. At low temperature and high pressure, water is in the liquid phase. At high temperature and low pressure, water is in the steam phase. The blue curve characterizes the equilibrium of the liquid and steam phases.

Furthermore, it must be taken into account that the above static pressure is lower after a contraction than before (e.g. at cones). This means that the static pressure – when measured elsewhere in the installation– might be different from the pressure at the flow sensor outlet.

This can be explained by combining Bernoulli's equation and the continuity equation. Based on Bernoulli's equation, the total pressure of the flow will be the same for any cross section. It can be reduced to:

$$p_{stat.} + p_{dynam.} = p_{stat.} + \frac{1}{2}\rho v^2 = \text{constant} \quad (\text{Bernoulli's equation})$$

$p_{stat.}$ is the static pressure. $\left[Pa = \frac{N}{m^2} = \frac{kg}{s^2 \cdot m} \right]; 1 \text{ bar} = 10^5 \frac{N}{m^2}$

$p_{dynam.}$ is the dynamic pressure. $\left[Pa = \frac{N}{m^2} = \frac{kg}{s^2 \cdot m} \right]; 1 \text{ bar} = 10^5 \frac{N}{m^2}$

ρ is the water density. $\left[\frac{kg}{m^3} \right]$

v is the water flow rate. $\left[\frac{m}{s} \right]$

The continuity equation determines that the product of pipe cross sectional area A and average flow velocity v , which corresponds to the volume flow rate passing through, is constant for an incompressible fluid like e.g. water. Therefore, the flow velocity is increased in a contraction and the static pressure decreases.

$$q = A_1 \cdot v_1 = A_2 \cdot v_2 = \dots = A_i \cdot v_i = \text{constant} \quad (\text{Continuity equation})$$

When dimensioning a flow sensor, you must take the above into consideration, especially if the sensor is used within the scope of EN 1434 between q_p and q_s , and in case of major pipe contractions.

7.1.2 Connections, accessories and assembly

Direct connection of ULTRAFLOW® is only permitted to Kamstrup MULTICAL® calculators on terminals 11-9-10, as shown in paragraph 7.7 *Electrical connections*. Connection to other calculator types requires the use of a Pulse Transmitter or Pulse Divider to obtain galvanic separation between ULTRAFLOW® and the calculator.

Note: Check that the meter factor is the same on the flow sensor and the calculator and use a Pulse Divider if this is not the case.

7.1.2.1 Couplings and mounting of temperature sensors

Correct flow sensor position (inlet or outlet) appears from the front label/display of MULTICAL®. When ULTRAFLOW® is connected to another calculator, ULTRAFLOW® can be used for both inlet and outlet. Crucial is the coding of the calculator. The flow direction of ULTRAFLOW® is indicated by arrows on the flow sensor. Couplings and gaskets for couplings as well as flange gaskets up to and including DN80 are suitable for both PN16 and PN25. Flange gaskets DN100 and DN125 are suitable for PN25 only due to their physical dimension. Couplings and gaskets are mounted as shown in *Figure 15*.

Note: In connection with G $\frac{3}{4}$ Bx110 mm and G1Bx110 mm, it must be checked that the thread run-out is sufficient.

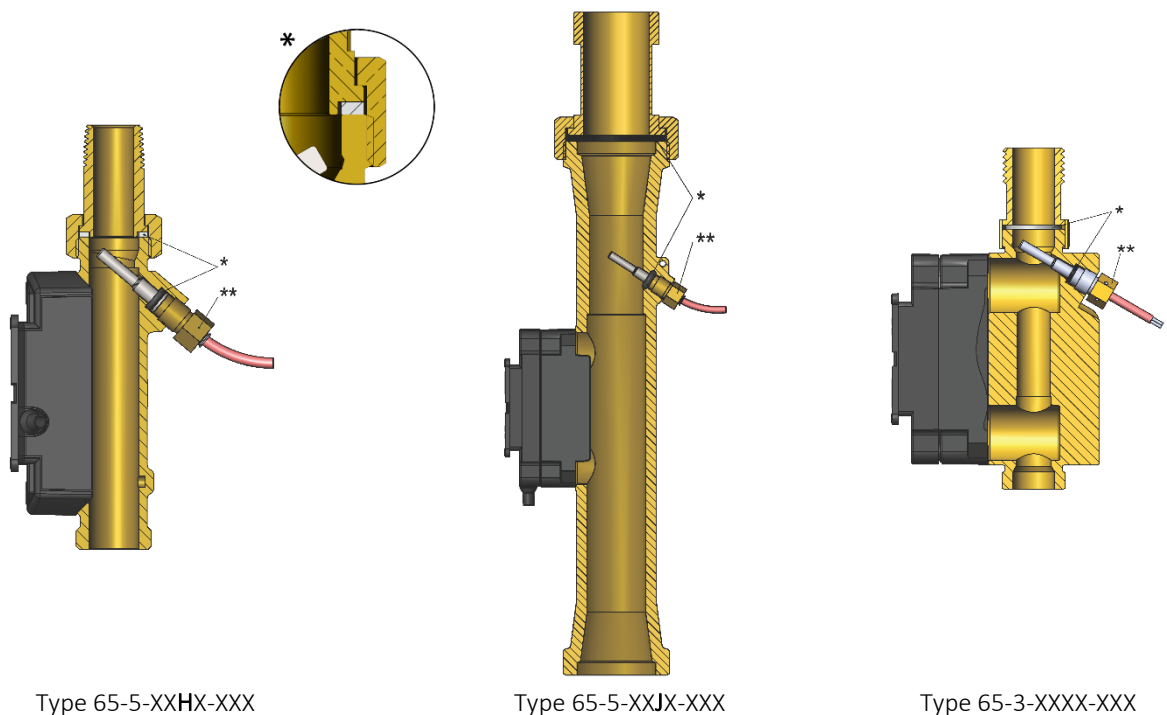


Figure 15. ULTRAFLOW® 54/34 with coupling and short direct sensor (*Gaskets; **Torque value approx. 4 Nm).

Some variants of ULTRAFLOW® 54/34 allow the mounting of a short direct temperature sensor in the flow sensor (see *Figure 15*). Short direct temperature sensors are suitable for both PN16 and PN25 installations. When exchanging a separately verified temperature sensor set, always use a new gasket 2210-131 at sensor assembly. If the temperature sensor is not mounted in the flow sensor, a blind plug with O-ring, 3130-262, is used instead. The blind plug with O-ring is also suitable for both PN16 and PN25.

When the installation has been completed, water flow can be turned on. The valve on the meter's inlet side must be opened first.

ULTRAFLOW® 54/34

Note: Check that the self-adhesive protective film on both ends of the flow sensor is removed before installation.

7.1.2.2 Insulation

ULTRAFLOW® 54/34 should neither be insulated nor enclosed as natural ventilation of the sensor is thereby prevented. Condensation, which is formed around the cooling sensor ULTRAFLOW® 34 when operating in hot, humid environments, is thus entrapped. Should you after careful consideration decide to insulate ULTRAFLOW® after all, the electronics case must at least remain uninsulated.

7.1.3 Maintenance and service during operation

The flow sensor is verified separately and can, therefore, be separated from the calculator. See the sealing drawings of the connected calculator such as MULTICAL® 603 (5512-2029_GB) or MULTICAL® 803 (5512-2360_GB).


Due to the sealing levels of Pulse Transmitter/Pulse Divider (see *Figure 69*), it is also permitted to replace the supply and exchange the supply type in Pulse Transmitter/Pulse Divider while ULTRAFLOW® is installed in the installation. For battery supply of Pulse Transmitter/Pulse Divider, a lithium battery with connector from Kamstrup A/S must be used. Lithium batteries must be correctly handled and disposed of (see Kamstrup document 5510-408, "Lithium batteries - Handling and disposal"). It is also permissible to replace output modules of Pulse Transmitter/Pulse Divider.

The cable length between ULTRAFLOW® and the MULTICAL® calculator may be extended under certain installation conditions, for example by use of Cable Extender Box, up to max 30 m (see *Figure 70*).

Other repairs of ULTRAFLOW® and Pulse transmitter/Pulse Divider require subsequent reverification on accredited laboratory.

7.2 Orientation of ULTRAFLOW® 54/34 (mounted separately)

The recommended orientation of the flow sensor in an installation takes into account the metrological sensitivity of the flow sensor to orientation, for example because of orientation-dependent flow profiles; poor water quality of district heating/cooling water, e.g. dirt, which can accumulate in the flow sensor; air in the system and environmental requirements, for example in case of condensation. The recommendations may vary for each of the types because of their diversity in the design.

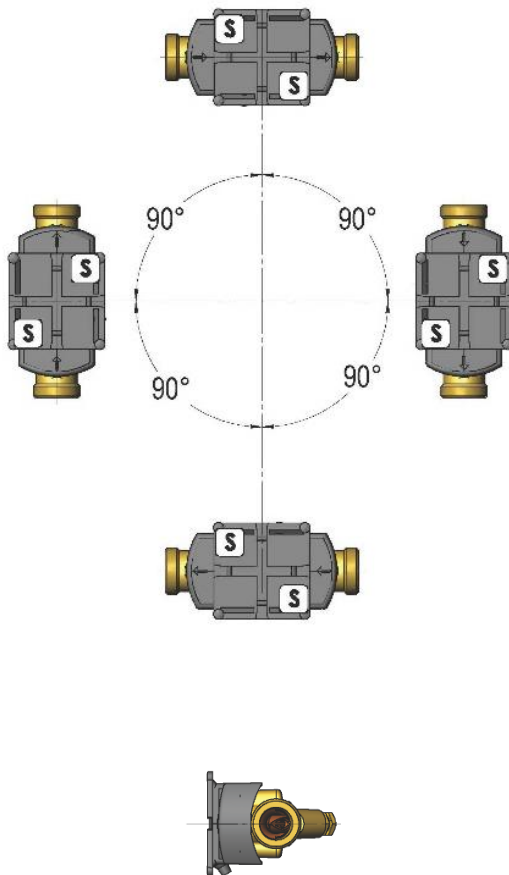

ULTRAFLOW® can be mounted vertically, horizontally or at an angle.

For vertical mounting, ULTRAFLOW® can with advantage be turned $\pm 360^\circ$ around the pipe axis.


Important!

The plastic casing should be placed on the side (at horizontal mounting).


Figure 16. Separate mounting of ULTRAFLOW®. Vertically, horizontally or at an angle.

ULTRAFLOW® 54/34


At horizontal mounting, ULTRAFLOW® can be turned around the pipe axis. See *Figure 17* below for allowed angles of rotation for the various types of ULTRAFLOW®.

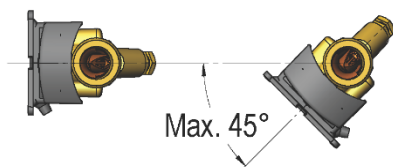

(a) ULTRAFLOW® 54 (Type 65-5-XXHX-XXX) can be turned downwards to max -45° around the pipe axis.

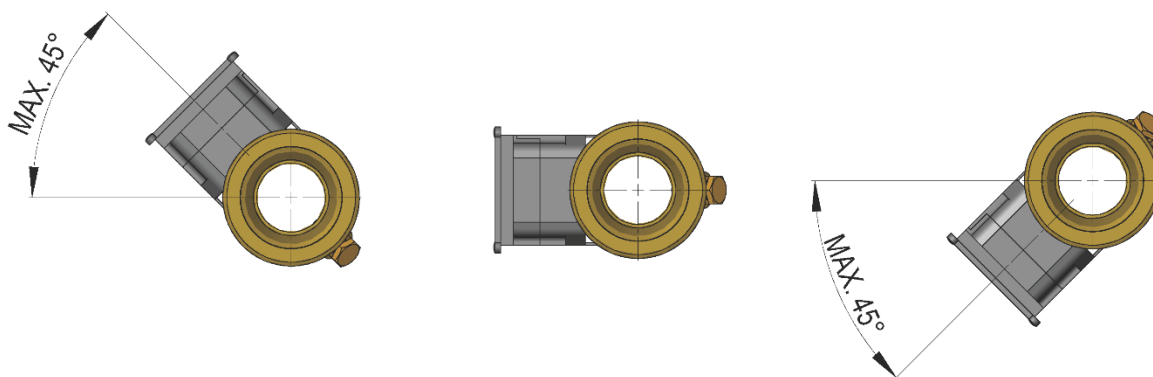

(b) ULTRAFLOW® 54 (except type-65-5-XXHX-XXX) can be turned up to max $\pm 45^\circ$ around the pipe axis.

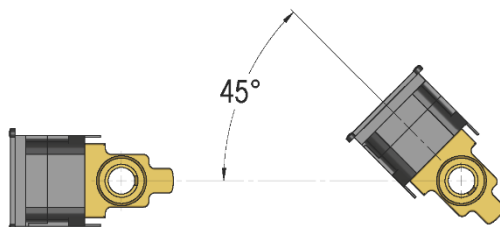

(c) ULTRAFLOW® 34 can be turned upwards to max $+45^\circ$ around the pipe axis.
If there is risk of condensation, ULTRAFLOW® 34 must be turned $+45^\circ$ around the pipe axis.

Figure 17. Orientation of ULTRAFLOW® 54/34 around the pipe axis at horizontal mounting.

7.3 Inlet prerequisites

ULTRAFLOW® requires neither straight inlet nor straight outlet to meet the Measuring Instruments Directive (MID) 2014/32/EU, OIML R75:2002 and EN 1434:2015. A straight inlet section will only be necessary in case of heavy flow disturbances before the meter. It is recommended to follow the guidelines based on CEN CR 13582.

Optimal position can be obtained if you take the below installation methods into consideration.

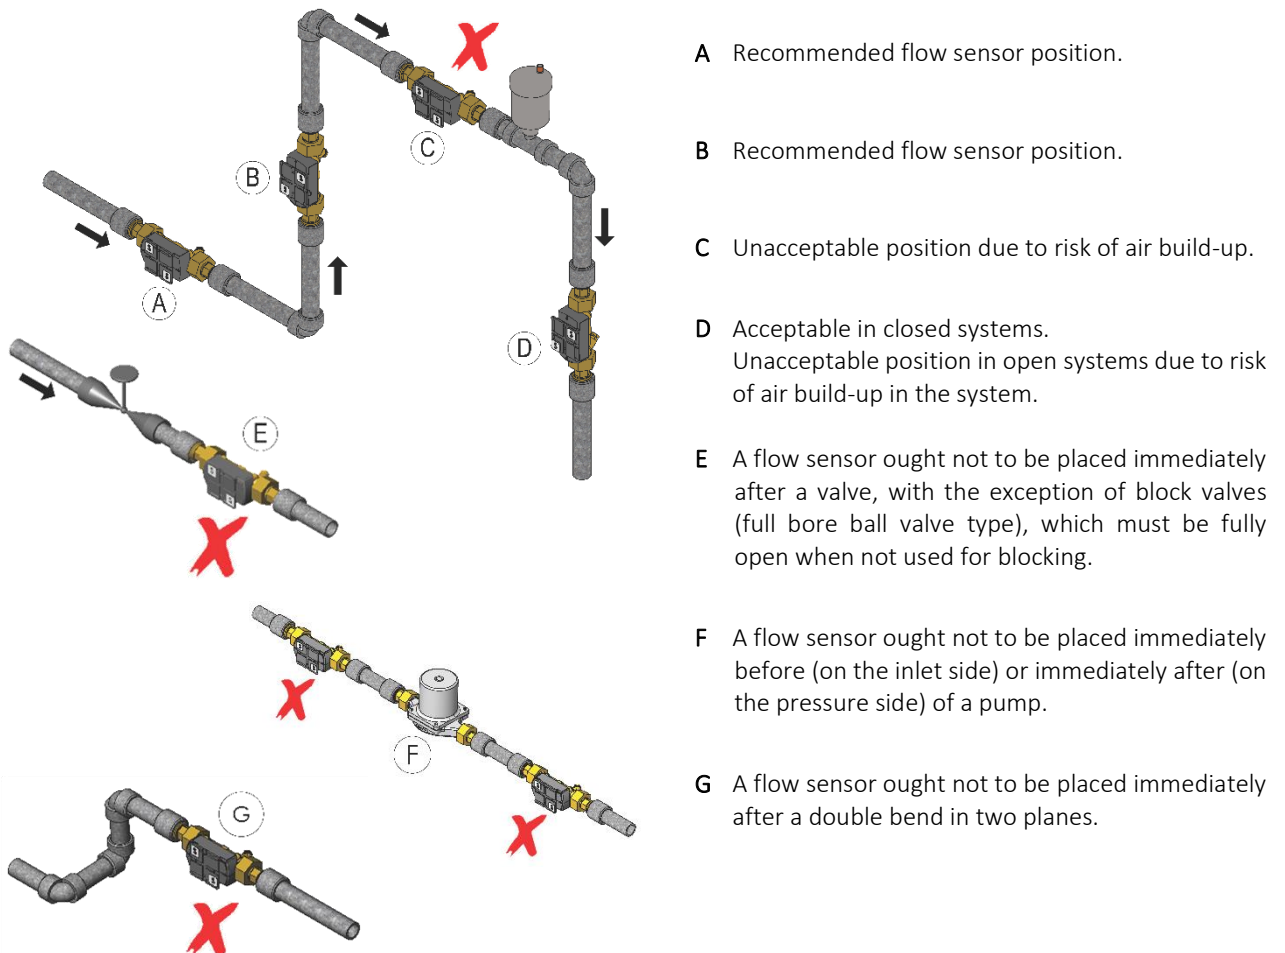


Figure 18. General installation recommendations for flow sensors.

For general information on installation, see CEN report *CEN/CR 13582, Heat meter installation. Instructions in selection, installation and use of heat meters.*

7.4 Operating pressure

To prevent cavitation, the static pressure at the flow sensor outlet must be min. 1.5 bar (1.0 bar for ULTRAFLOW® 54 type 65-5-XXHX-XXX) at q_p and min. 2.5 bar (2.0 bar for ULTRAFLOW® 54 type 65-5-XXHX-XXX) at q_s . This applies to temperatures up to approx. 80 °C. ULTRAFLOW® must not be exposed to pressure lower than the ambient pressure (vacuum). For further information on operating pressure, see paragraph 7.1.1 *Guidelines for dimensioning ULTRAFLOW®.*

7.5 Humidity and condensation

7.5.1 Flow sensor orientation

In installations in humid environments, you must always be careful to avoid water penetration in the meter electronics. In general, wires/cables must hang freely downwards after cable connections to form a drip nose for drainage of water and condensation. By horizontal installation, the plastic housing of ULTRAFLOW® 54/34 must be turned +45° around the pipe axis and ULTRAFLOW® 54 (Type 65-5-XXHX-XXX) must be positioned on the side (see Figure 19).

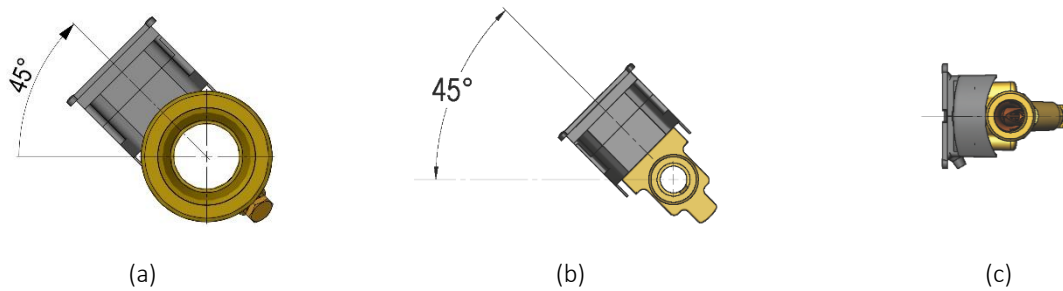


Figure 19. Orientation of (a) ULTRAFLOW® 54 and (b) ULTRAFLOW® 34 as well as (c) ULTRAFLOW® 54 (Type 65-5-XHXX-XXX) around the pipe axis in humid environments at horizontal installation.

ULTRAFLOW® 34 can be installed in environments with periodically condensing humidity, but ought neither be insulated nor enclosed as condensation formed around the meter is thereby entrapped. Should you after careful consideration decide to insulate ULTRAFLOW® 34 after all, the electronics case must at least remain uninsulated.

7.5.2 Orientation of Pulse Transmitter and Pulse Divider

Mounting Pulse Transmitter and Pulse Divider, the cable connections must always be horizontally or downwards oriented in order to avoid the risk of water and condensation being led into the electronics box via the cables. This is especially important in moist environments.

Furthermore, wires/cables must in general hang freely downwards after cable connections to form a drip nose for drainage of water and condensation.

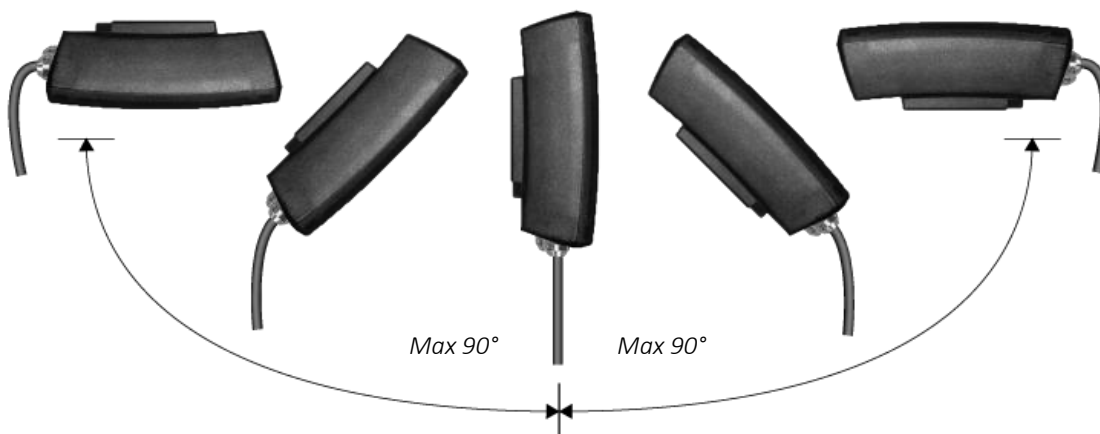


Figure 20. Orientation of Pulse Transmitter/Pulse Divider with respect to cable alignment.

7.6 Installation examples (mechanical)

Both MULTICAL® 603 and MULTICAL® 803 (by means of mounting bracket 3026-857) can be mounted directly on ULTRAFLOW® 54/34. To optimize the readability of the calculator display, you can benefit from using the supplied angle bracket 3026-858 for ULTRAFLOW® 54 (type 65-5-XXHX-XXX).

Note: At medium temperatures above 90 °C or below the ambient temperature, calculator and Pulse Transmitter/Pulse Divider must not be mounted on the flow sensor. Instead wall-mounting is recommended.

7.6.1 MULTICAL® 603 mounted on ULTRAFLOW® 54 (Type 65-5-XXHX-XXX)

7.6.1.1 Installation in an ascending pipe

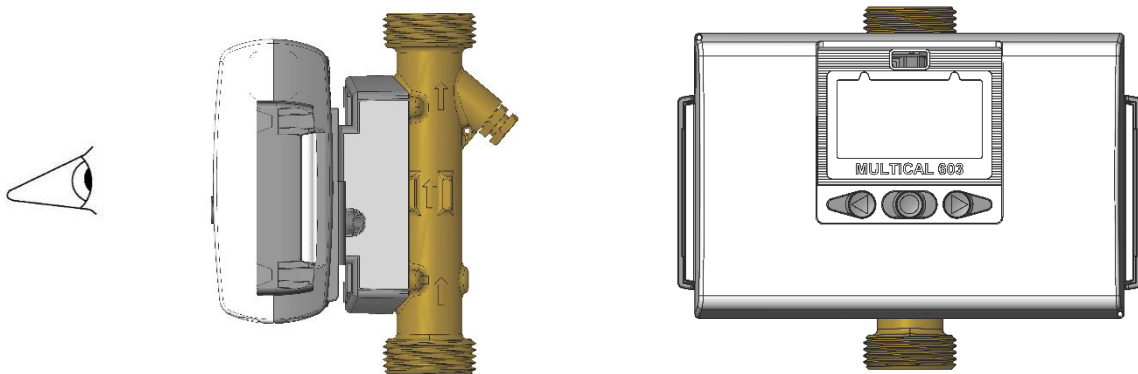


Figure 21. MULTICAL® 603 mounted on ULTRAFLOW® 54 mounted in an ascending pipe.

When installing ULTRAFLOW® in an ascending pipe, it can be of advantage to turn ULTRAFLOW® $\pm 360^\circ$ around the pipe axis to optimize the readability of the MULTICAL® display at direct mounting of MULTICAL® on ULTRAFLOW®.

7.6.1.2 Installations at or above eye level

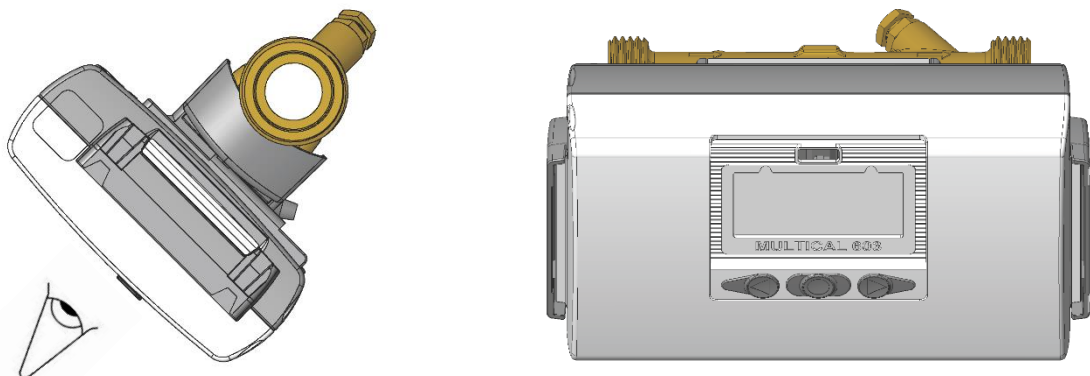


Figure 22. MULTICAL® 603 mounted on ULTRAFLOW® 54 mounted horizontally at or above eye level.

In case of installation above eye level, it can be of advantage to turn ULTRAFLOW® 54 -45° downwards to optimize the readability of the MULTICAL® display at direct mounting of MULTICAL® on ULTRAFLOW®.

Note: At installation in humid environments, the plastic housing of ULTRAFLOW® 54 (type 65-5-XXHX-XXX) must be positioned on the side (at horizontal mounting).

ULTRAFLOW® 54/34

7.6.1.3 Installation at ground level

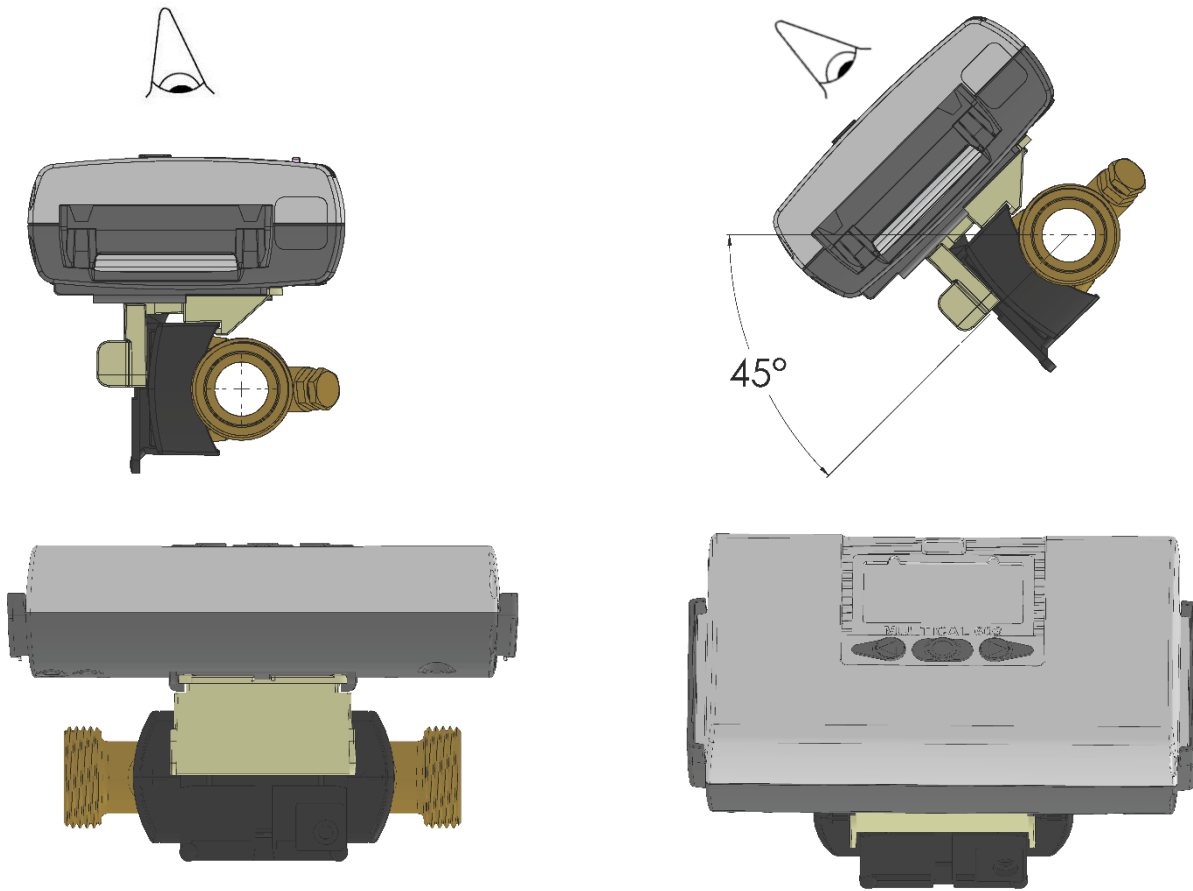


Figure 23. MULTICAL® 603 mounted on ULTRAFLOW® 54 (type 65-5-XXHX-XXX with angle bracket 3026-858) mounted horizontally near the ground.


When installing near the ground, MULTICAL® can with advantage be mounted directly on ULTRAFLOW® 54 (type 65-5-XXHX-XXX) by means of the supplied angle bracket (3026-858). ULTRAFLOW® 54 (type 65-5-XXHX-XXX) can be turned -45° downwards to optimize the readability of the MULTICAL® display.

Note: At installation in humid environments, the plastic housing of ULTRAFLOW® 54 (type 65-5-XXHX-XXX) must be positioned on the side (at horizontal mounting).

7.6.1.4 Mounting of angle bracket 3026-858

Angle bracket 3026-858 is included with ULTRAFLOW® 54 (type 65-5-XXXHX-XXX) and can be easily mounted on both sides of the electronics case as shown in *Figure 24* and, if necessary, also be easily removed again:

- A** Fasten the hooks of the angle bracket around the edge of one of the sides of the electronics case (see detail drawing). Note that the angle bracket can in principle be mounted on either side of the electronics case. Although the type label is fairly robust, it must be handled with care if the angle bracket is to be mounted on this side. The signal cable on the other side is flexible enough to be inserted between the electronics case and the angle bracket.
- B** Move the angle bracket around the side edge towards the electronics case.
- C** Press the angle bracket against the electronics case cover at the indicated positions and click it on (C1). Be aware that there is enough room for seal wire between angle bracket and electronics case. If the angle bracket needs to be removed, the snap lock can be opened and pulled backwards with your fingers (C2).

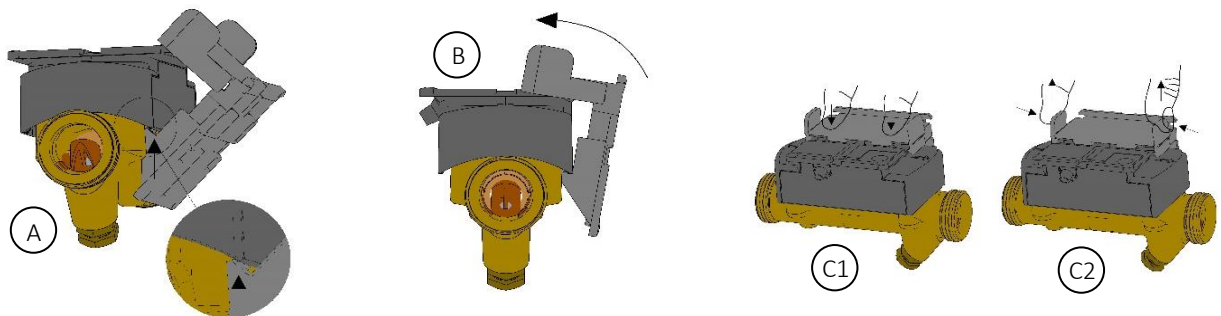

*Figure 24. Mounting the enclosed angle bracket on ULTRAFLOW® 54 (H):
(A) Adjusting, (B) turning and (C) closing (opening) the angle bracket.*

7.6.2 MULTICAL® 603 mounted on ULTRAFLOW® 54 (Type 65-5-XXJX-XXX and Type 65-5-XXCX-XXX) and ULTRAFLOW® 34

ULTRAFLOW® 54 (types 65-5XXJX-XXX, 65-5-XXCX-XXX) can be turned $\pm 45^\circ$ around the pipe axis to optimize the readability of MULTICAL® 603 mounted directly on ULTRAFLOW® 54 (see Figure 25 (a)). In some installations near the ground, MULTICAL® can with advantage be mounted directly on ULTRAFLOW® by means of angle bracket 3026-252 (see Figure 25 (b)). The angle bracket 3026-252 must be ordered separately.

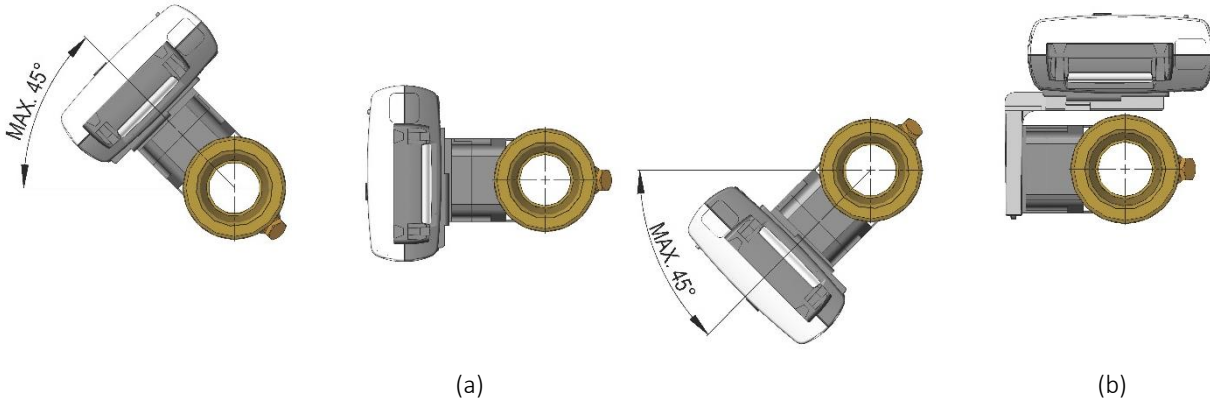


Figure 25. MULTICAL® 603 mounted on ULTRAFLOW® 54.

- (a) The flow sensor can be turned $\pm 45^\circ$ around the pipe axis to optimize the readability of the MULTICAL® display.
- (b) In some cases, the angle bracket 3026-252 can optimize the readability of the MULTICAL® display.

ULTRAFLOW® 34 can be turned $+45^\circ$ around the pipe axis to optimize the readability of MULTICAL® 603 mounted directly on ULTRAFLOW® 34, but must not be turned downwards (see Figure 26).

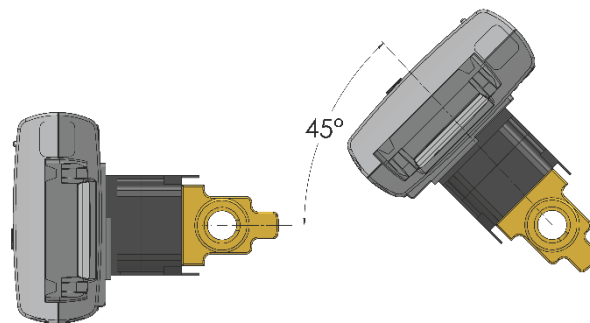


Figure 26. MULTICAL® 603 mounted on ULTRAFLOW® 34. The flow sensor can be turned upwards to max $+45^\circ$ around the pipe axis. At risk of condensation, ULTRAFLOW® 34 must be turned $+45^\circ$ around the pipe axis.

Note: When installing in humid environments, the plastic housing of ULTRAFLOW® 54/34 must be turned $+45^\circ$ around the pipe axis (see Figure 19).

7.6.3 MULTICAL® 803 mounted on ULTRAFLOW®

In some cases, compact mounting of the MULTICAL® 803 calculator may be an advantage. The MULTICAL® 803 calculator is large and only suitable for compact mounting in places where the installation can be secured against mechanical impacts such as pulls and shocks. By compact mounting, the calculator is mounted directly on ULTRAFLOW® using the mounting bracket 3026-857. If there is risk of condensation (e.g. in cooling applications), the calculator must always be wall-mounted. Furthermore, ULTRAFLOW® in cooling applications must be a condensation-proof version.

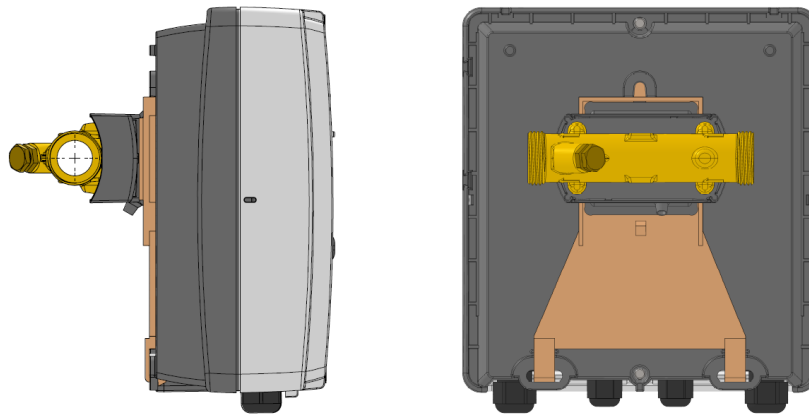


Figure 27. MULTICAL® 803 with bracket 3026-857 mounted on ULTRAFLOW® 54 (Type 65-5-XXHX-XXX).

7.6.4 Pulse Transmitter/Pulse Divider

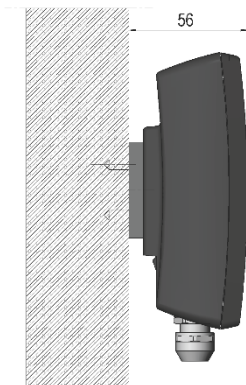


Figure 28. Pulse Transmitter/Pulse Divider mounted on bracket 3026-207.A

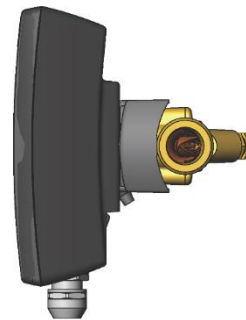


Figure 29. Pulse Transmitter/Pulse Divider mounted on ULTRAFLOW® 54 (Type 65-5-XXHX-XXX).

7.7 Electrical connections

7.7.1 Electrical connection of ULTRAFLOW® and MULTICAL®

ULTRAFLOW®	→	MULTICAL®
Blue (ground)	→	11
Red (supply)	→	9
Yellow (signal)	→	10

Table 23. Connection of ULTRAFLOW® and MULTICAL®.

Using long signal cables, careful consideration is required in connection with installation. With respect to EMC, there must be a distance of at least 25 cm between signal cables and all other cables.

7.7.2 Electrical connection of Pulse Transmitter and Pulse Divider

If ULTRAFLOW® and MULTICAL® are connected via Pulse Transmitter, ULTRAFLOW® is galvanically separated from MULTICAL® and the cable length between ULTRAFLOW® and MULTICAL® can be extended up to 100 m.

Note: Flow-info is not possible if Pulse Transmitter/Pulse Divider is used.

If ULTRAFLOW® is connected to other equipment than MULTICAL®, always connect ULTRAFLOW® via Pulse Transmitter or Pulse Divider. For connection of Pulse Transmitter and Pulse Divider to other calculators, see paragraph 8.7 *Pulse output of Pulse Transmitter and Pulse Divider*.

ULTRAFLOW®	→	Pulse Transmitter/ Pulse Divider ¹⁾		→	MULTICAL®
		Input	Output		
Blue (ground)	→	11	11A	→	11
Red (supply)	→	9	9A	→	9
Yellow (signal)	→	10	10A	→	10

Table 24. Connection of ULTRAFLOW® and MULTICAL® via Pulse Transmitter/Pulse Divider.

¹⁾ Pulse Divider is normally not used together with MULTICAL®.

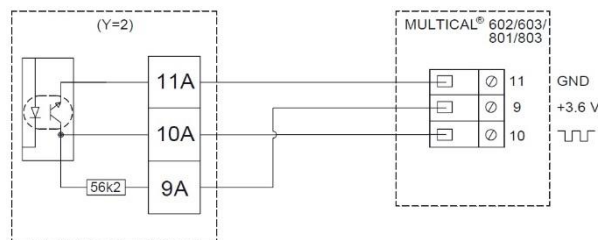


Figure 30. Three-wire connection of Pulse Transmitter with output module (Y=2) to MULTICAL® 602/603/801/803.

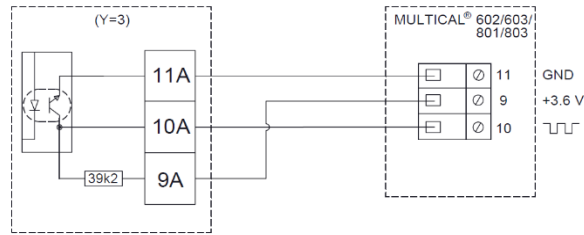


Figure 31. Three-wire connection of Pulse Transmitter with output module (Y=3) to MULTICAL® 602/603/801/803.

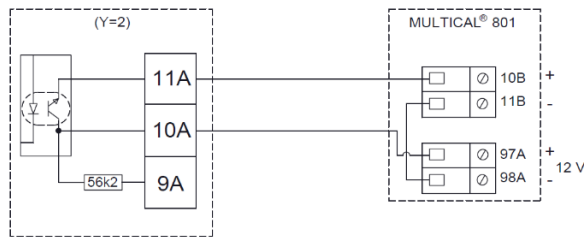


Figure 32. Two-wire connection of Pulse Transmitter with output module (Y=2) to MULTICAL® 801.

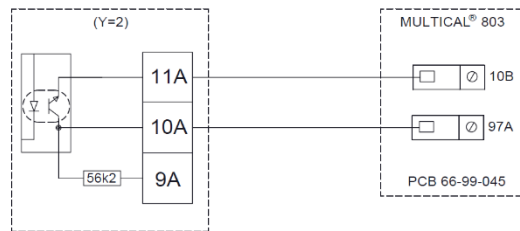


Figure 33. Two-wire connection of Pulse Transmitter with output module (Y=2) to MULTICAL® 803.

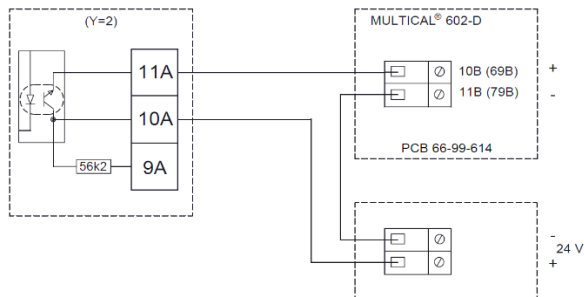


Figure 34. Two-wire connection of Pulse Transmitter with output module (Y=2) to MULTICAL® 602-D and external 24 VDC supply ¹⁾.

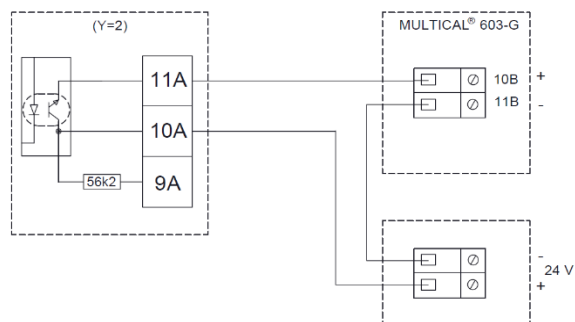


Figure 35. Two-wire connection of Pulse Transmitter with output module (Y=2) to MULTICAL® 603-G and external 24 VDC supply ¹⁾.

¹⁾ External 24 VDC supply is not part of the calculator.

Examples of connection of Pulse Transmitter appear from paragraph 7.8.2.

7.7.2.1 Cable length

The maximum allowable cable length between Pulse Transmitter/Pulse Divider and MULTICAL® depends on the output module used in Pulse Transmitter/Pulse Divider as well as how the MULTICAL® calculator is connected. Refer to the Technical description of the calculator.

Using long signal cables, careful consideration is required in connection with installation. With respect to EMC, there must be a distance of **at least** 25 cm between signal cables and all other cables.

7.7.2.2 Connection of power supply

If ULTRAFLOW® is connected via Pulse Transmitter or Pulse Divider, ULTRAFLOW® is supplied by the supply module/battery mounted in Pulse Transmitter/Pulse Divider.

7.7.2.2.1 Battery supply

Pulse Transmitter/Pulse Divider is fitted with a D-cell lithium battery with connector. The battery is connected to the output module.

Optimal battery lifetime is obtained by keeping the battery temperature below 30 °C, e.g. by wall-mounting of Pulse Transmitter/Pulse Divider.

The voltage of a lithium battery is almost constant throughout the lifetime of the battery (approx. 3.65 V). Therefore, it is not possible to determine the remaining capacity of the battery by measuring the voltage.

The battery cannot and must not be charged and must not be short-circuited.

The battery must be replaced by a corresponding lithium battery with connector from Kamstrup A/S. Used batteries must be handed in for approved destruction, e.g. to Kamstrup A/S (see Kamstrup document 5510-408, "Lithium batteries - Handling and disposal").

7.7.2.2.2 Mains supply modules

The mains supply modules are protection class II and are connected to the interface module via a short two-wire cable with connector. The modules are powered via a two-wire mains supply cable (without earth connection) through the cable connector of Pulse Transmitter/Pulse Divider. Use supply cable with an outer diameter of maximum 10 mm and ensure correct stripping of insulation as well as correct tightening of cable connection. (See paragraph 7.7.2.2.4)

Max permitted fuse: 6 A.

230 VAC

This PCB module is galvanically separated from the mains supply and is suitable for direct 230 V mains installation. The module includes a double-chamber safety transformer, which fulfils double insulation requirements when the cover is mounted on Pulse Transmitter/Pulse Divider. Power consumption is less than 1 W or 1 VA.

National regulations for electric installations must be observed. The 230 VAC module can be connected/disconnected by the district heating station’s personnel, whereas the fixed 230 V installation in the meter panel must be carried out by an authorized electrician.

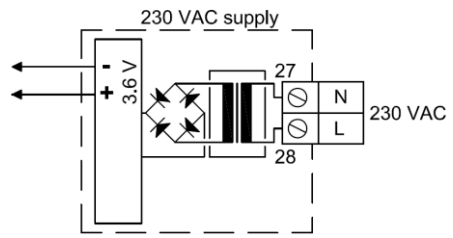


Figure 36. 230 VAC supply module for Pulse Transmitter/Pulse Divider.

24 VAC

This PCB module is galvanically separated from the 24 VAC mains supply and is both suitable for industrial installations with joint 24 VAC supply and individual installations, which are supplied by a separate 230/24 V safety transformer in the main electrical panel. The module includes a double-chamber safety transformer, which fulfils double insulation requirements when the cover is mounted on Pulse Transmitter/Pulse Divider. Power consumption is less than 1 W or 1 VA.

National regulations for electric installations must be observed. The 24 VAC module can be connected/disconnected by the district heating station’s personnel, whereas the fixed 230/24 V installation in the main electrical panel must be carried out by an authorized electrician.

Note: This module cannot be supplied by 24 VDC (direct current).

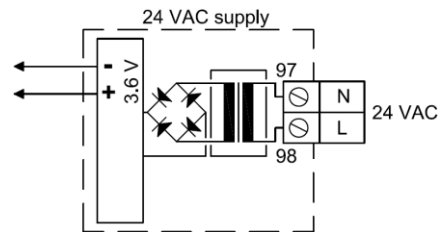


Figure 37. 24 VAC supply module for Pulse Transmitter/Pulse Divider.

230/24 VAC safety transformer

The 24 VAC module is especially suited for installation together with a 230/24 VAC safety transformer, e.g. type 6699-403, which can be installed in the main electrical panel before the safety relay. When the transformer is used, the total power consumption of the meter incl. the 230/24 VAC transformer will not exceed 1.7 W.



Figure 38. 230/24 VAC safety transformer.

7.7.2.2.3 Mains supply cable

Pulse Transmitter/Pulse Divider is available with mains supply cable H05 VV-F for either 24 VAC or 230 VAC (l=1.5 m).

 


Figure 39. Mains supply cable (2 x 0.75 mm²), max 6 A fuse.

“H05 VV-F” is the designation of a strong PVC mantle, which withstands max 70 °C. Therefore, the mains cable must be installed with sufficient distance to hot pipes, etc.

7.7.2.2.4 Cable connections

Cable dimension of signal cable connections: 2...6 mm

Cable dimension of mains cable connections: 4.5...10 mm

Tightening torque: Maximum 4 Nm (traction relief minimum 40 N according to EN 61558)

Note: In connection with battery supply, the unused cable connection must be sealed off as shown in *Figure 42*, page 53.

7.7.2.2.5 Change of supply unit

The supply unit of Pulse Transmitter/Pulse Divider can be changed from mains supply to battery or vice versa as the needs of the utility company change. Thus, it can be an advantage to change mains-supplied Pulse Transmitters/Pulse Dividers to battery-supplied Pulse Transmitters/Pulse Dividers, e.g. in case of buildings under construction where the mains supply can be unstable or periodically missing.

Note that the supply type appears from the label of Pulse Transmitter/Pulse Divider. If the original supply type is changed, it will no longer be in accordance with the label.

7.7.3 Electrical connection of Cable Extender Box

The Cable Extender Box includes transient transorb diodes, making it possible to extend the cable between ULTRAFLOW® and MULTICAL® with up to 30 m in total, while the cable length without the Cable Extender Box can be maximum up to 10 m.

Mount Cable Extender Box to the wall or the like close to ULTRAFLOW®. Connect the 3 wires in the cable from ULTRAFLOW® to one of the two terminals in Cable Extender Box. You can select any of the terminals. Use a 3-wire extension cable with a length of up to 27.5 m with the same wire diameter and of the same quality as the cable from ULTRAFLOW®, and connect the 3 wires to the other terminal in Cable Extender Box. Connect the opposite end of the extension cable to the terminal (V1 or V2) in MULTICAL®. Connect the cables according to the following combination: 10: Yellow, 9: Red and 11: Blue. This colour combination applies to both Cable Extender Box and MULTICAL®. Perform a function check, and complete by sealing Cable Extender Box with the included void labels or the seal labels of the utility.

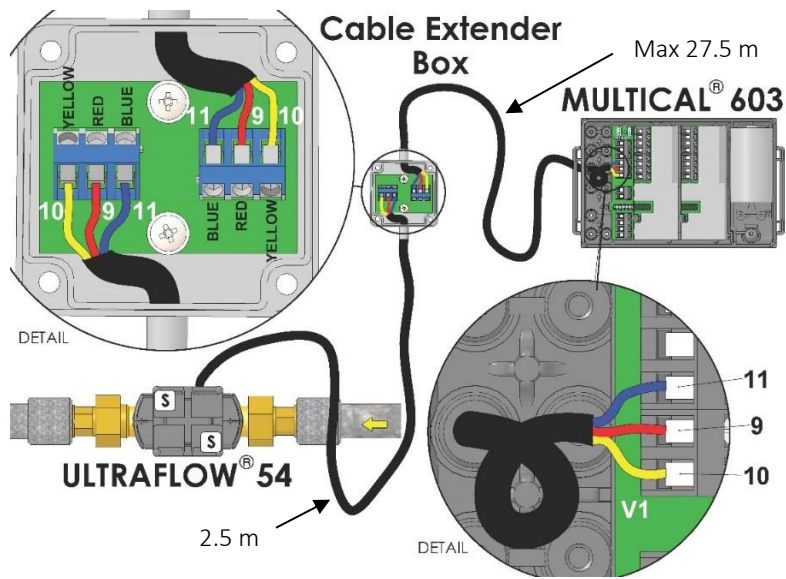


Figure 40. Electrical connection of ULTRAFLOW® to MULTICAL® via Cable Extender Box. The example illustrates a default 2.5 m cable from ULTRAFLOW® to Cable Extender Box. In this case, the cable length between Cable Extender Box and MULTICAL® can be up to max 27.5 m.

7.8 Installation examples (electrical)

7.8.1 Example of connection of ULTRAFLOW® and MULTICAL®

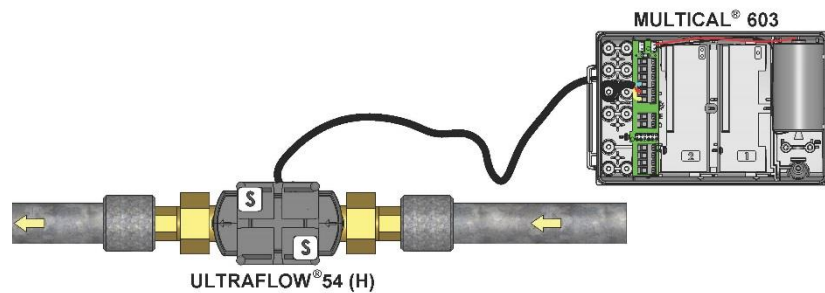


Figure 41. ULTRAFLOW® 54 (Type 65-5-XXHX-XXX) connected to MULTICAL® 603.

See paragraph 7.7 for electrical connection.

7.8.2 Example of connection of Pulse Transmitter

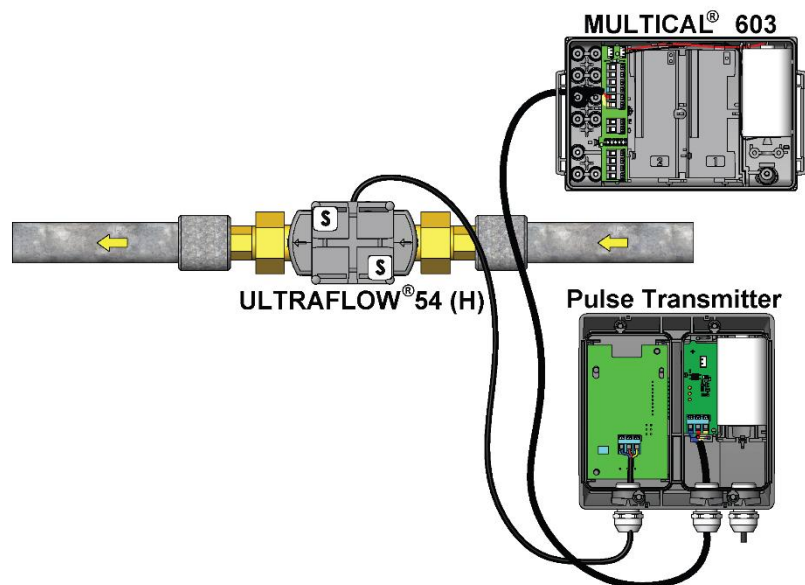


Figure 42. ULTRAFLOW® 54 (Type 65-5-XXHX-XXX) connected to Pulse Transmitter with battery supply. MULTICAL® 603 is connected to the Pulse Transmitter's output module (Y=3).

Note: If battery-supplied, the right cable connection of Pulse Transmitter is plugged.

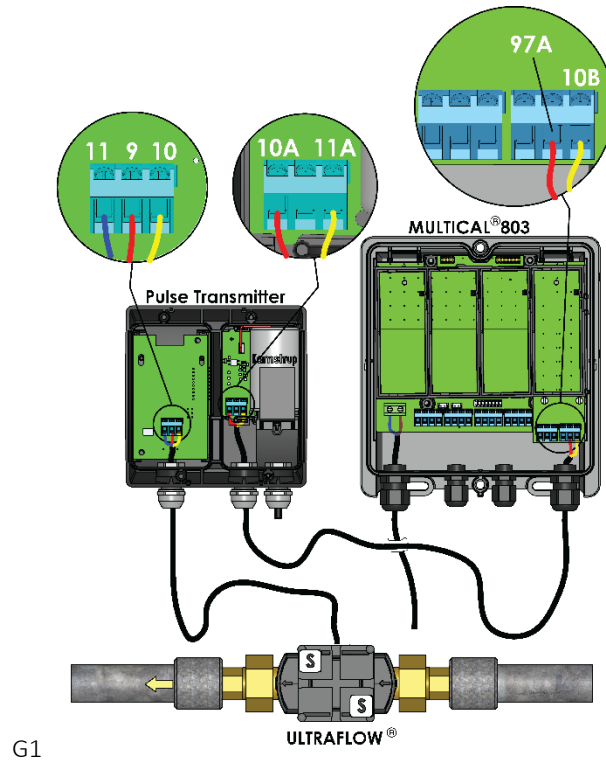


Figure 43. ULTRAFLOW® 54 (Type 65-5-XXHX-XXX) connected to Pulse Transmitter with 230 VAC supply. MULTICAL® 803 is connected to the Pulse Transmitter's output module (Y=2).

See paragraph 7.7.2 for electrical connection.

7.8.3 Calculator with two flow sensors

MULTICAL® 603 and 803 can be used in various applications with two flow sensors, e.g. leak monitoring or open systems. When two ULTRAFLOW® sensors are direct connected to one MULTICAL®, a close electric coupling between the two pipes should be carried out as a main rule. If the two pipes are installed in a heat exchanger, close to the flow sensors, however, the heat exchanger will provide the necessary electric coupling*.

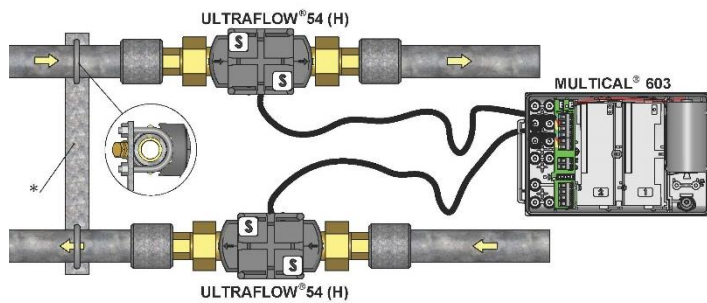


Figure 44. Inlet and outlet pipes are closely electrically coupled*. No welded joints occur.

In installations where the electric coupling is not possible or welding in the pipe system can occur, the cable from one ULTRAFLOW® must pass through a Pulse Transmitter with galvanic separation before the cable enters MULTICAL®.

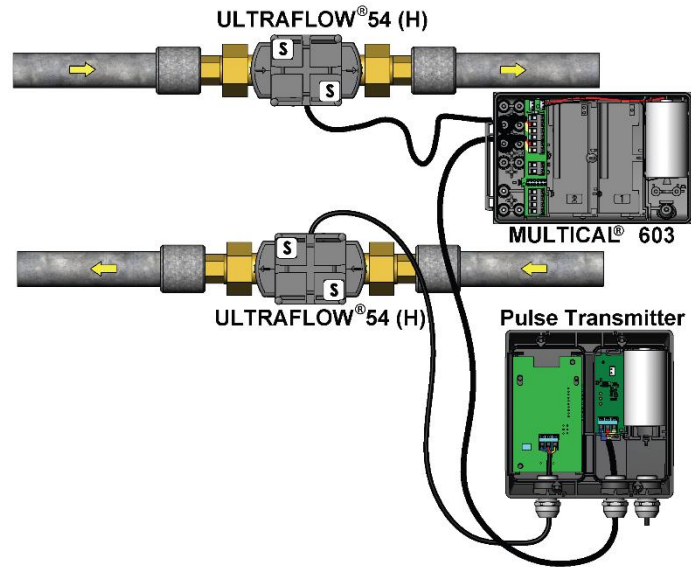


Figure 45. Inlet and outlet pipes are not necessarily closely coupled.
Electric welding *) can occur.

*) Electric welding must always be carried out with the earth pole closest to the welding point. Damage to meters due to welding is **not** comprised by Kamstrup's factory guarantee.

7.9 Operational check

Carry out an operational check when the complete meter (flow sensor, temperature sensors and calculator) has been installed and connected. Open thermostats and valves so that water is flowing in the system and check that there are credible values for temperatures and water flow in the calculator display.

8 Functional description

Within the heat, cooling and water meter industry, producers have been working on alternative techniques for the replacement of flow sensors based on the mechanical principle. Research and development at Kamstrup have proven that ultrasonic measuring is the most viable solution. Combined with microprocessor technology and piezo ceramics, ultrasonic measuring is not only accurate but also reliable.

8.1 Flow measurement with ultrasound

Within ultrasonic flow measuring, there are two main principles: the transit time method and the Doppler method. The Doppler method is based on the frequency change which occurs when sound is reflected by a moving particle. This is the effect you experience when a car drives by. The sound (the frequency) decreases when the car passes by. The transit time method used in ULTRAFLOW® utilizes the fact that it takes an ultrasonic signal, sent in the opposite direction of the flow, longer to travel from transmitter to receiver than a signal sent in the same direction as the flow.

A piezo-ceramic element is used for transmitting and receiving ultrasound. The thickness of the element changes when exposed to an electric field (voltage) and thereby it functions as a transmitter of ultrasound. When the element is mechanically influenced, it generates a corresponding electric voltage and thus functions as a receiver of ultrasound.

8.2 Signal path, flow calculation and flow profiles

As proven by the calculations below, the average flow velocity is directly proportional to the transit time difference of ultrasound signals which are sent with or against the flow. *Figure 46* shows as example the essential elements of the signal path in ULTRAFLOW® 54 (type 65-5-XXHX-XXX, q_p 0.6...2.5 m³/h): Piezo-electric elements transmit and receive the ultrasound signal, which is reflected into and through the measuring tube to the receiver via reflectors. Due to superposition of velocities of water and sound signal, ultrasound propagates faster with the flow than against the flow.

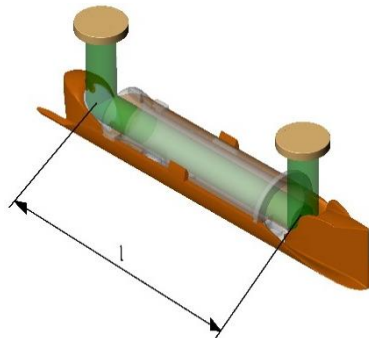


Figure 46. Signal path in ULTRAFLOW® 54 (type 65-5-XXHX-XXX, q_p 0.6...2.5 m³/h). Sound signals are transmitted by the transducers via 2 reflectors. The signal's transit times with and against the flow vary for the significant sound path distance (parallel with the measuring tube). In this case, the flow is flowing from right to left.

For the calculation of the transit time difference, the signal path along the flow is crucial, and the transit time to the measuring distance is calculated as:

$$t = \frac{l}{c \pm v}$$

where:

t is the transit time from sender to receiver of the sound signal along the measuring distance l . [s]

l is the measuring distance. [m]

c is the sound propagation velocity in stagnant water. [m/s]

v is the average flow velocity of water. [m/s]

The transit time difference can be expressed as the difference between the absolute time of the signal sent against the flow (-) and the signal sent with the flow (+).

$$\Delta t = \frac{l}{c - v} - \frac{l}{c + v}$$

which can also be written as:

$$\Delta t = l \frac{(c + v) - (c - v)}{(c - v) \cdot (c + v)} \Rightarrow \Delta t = l \frac{2v}{c^2 - v^2}$$

As $c^2 \gg v^2$, v^2 can be omitted and the formula reduced as follows:

$$v = \frac{\Delta t \cdot c^2}{2l}$$

Thus, we know the basic connection between the average flow velocity and the transit time difference.

The transit time difference in a flow sensor is very small (nanoseconds). Therefore, the time difference is measured as a phase difference between the two 1 MHz sound signals in order to obtain the necessary accuracy.

Furthermore, the influence of the temperature of the sound velocity of water must be taken into account. In ULTRAFLOW®, the velocity of ultrasound c is measured by means of a number of absolute time measurements between the two transducers. As the geometry of the flow sensor is known, the measured speed of the ultrasound is thus a scale for the water temperature, which is further used in the built-in ASIC in connection with the flow calculations.

The flow (volume flow rate) is then determined by measuring the transit time difference, calculate the average flow velocity and multiply it by the area of the measuring tube:

$$q = v \cdot A$$

where:

q is the flow (volume flow rate).	$\left[\frac{m^3}{h}\right]$
A is the area of the measuring pipe.	$[m^2]$

The volume V passing through is finally calculated as a time integration over the flow (multiplication of (cross section constant) flow by time).

The calculation above is simplified since it does not take into account the flow profiles. In general, flow profiles influence the measurement, which in our case is the transit time difference. Flow sensors are thus adjusted properly according to the different Reynolds numbers that characterize the flow, i.e. in practice for different flows (volume flow) and temperatures. To cover the various flow profiles in the best possible way with the ultrasound signal, Kamstrup uses a triangle sound path, as illustrated in *Figure 47* from two perspectives, for large ULTRAFLOW® 54 flow sensor (q_p 3.5...100 m^3/h) and ULTRAFLOW® 34 (q_p 2.5...100 m^3/h).

ULTRAFLOW® 54/34

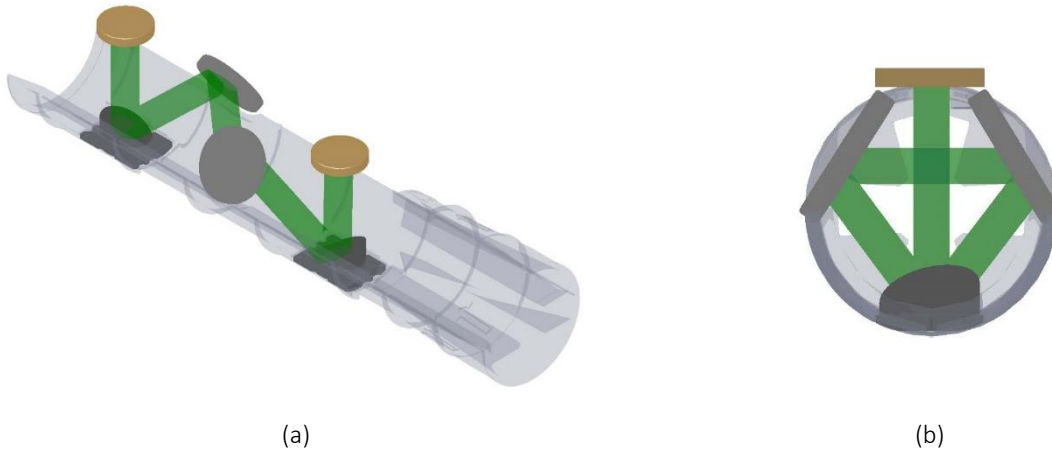


Figure 47. Signal path in ULTRAFLOW® 54 (q_p 3.5...100 m³/h) and ULTRAFLOW® 34 (q_p 2.5...100 m³/h) shown from the side (a) and looking into the measuring tube (b). Sound signals are transmitted by the transducers via 4 reflectors. When you look into the measuring tube (b), the signal is reflected along a triangular path.

8.3 Function of ULTRAFLOW®

During a flow measurement, ULTRAFLOW® passes through a number of sequences, which are repeated at fixed intervals. Deviations only occur when the flow sensor is in test mode and when the supply is connected during initialization/start-up.

The difference between the main routines in normal mode and fast/test mode is the frequency of the measurements on which pulse emission is based.

In connection with Power Down, it may take up to 16 seconds to start with proper functioning.

In the flow sensor's working range from min. cut off to saturation flow, there is a linear connection between the flow rate and the number of pulses being emitted. The diagram below shows an example of the connection between flow and pulse frequency for ULTRAFLOW® $q_p 1.5 \text{ m}^3/\text{h}$ (Figure 48).

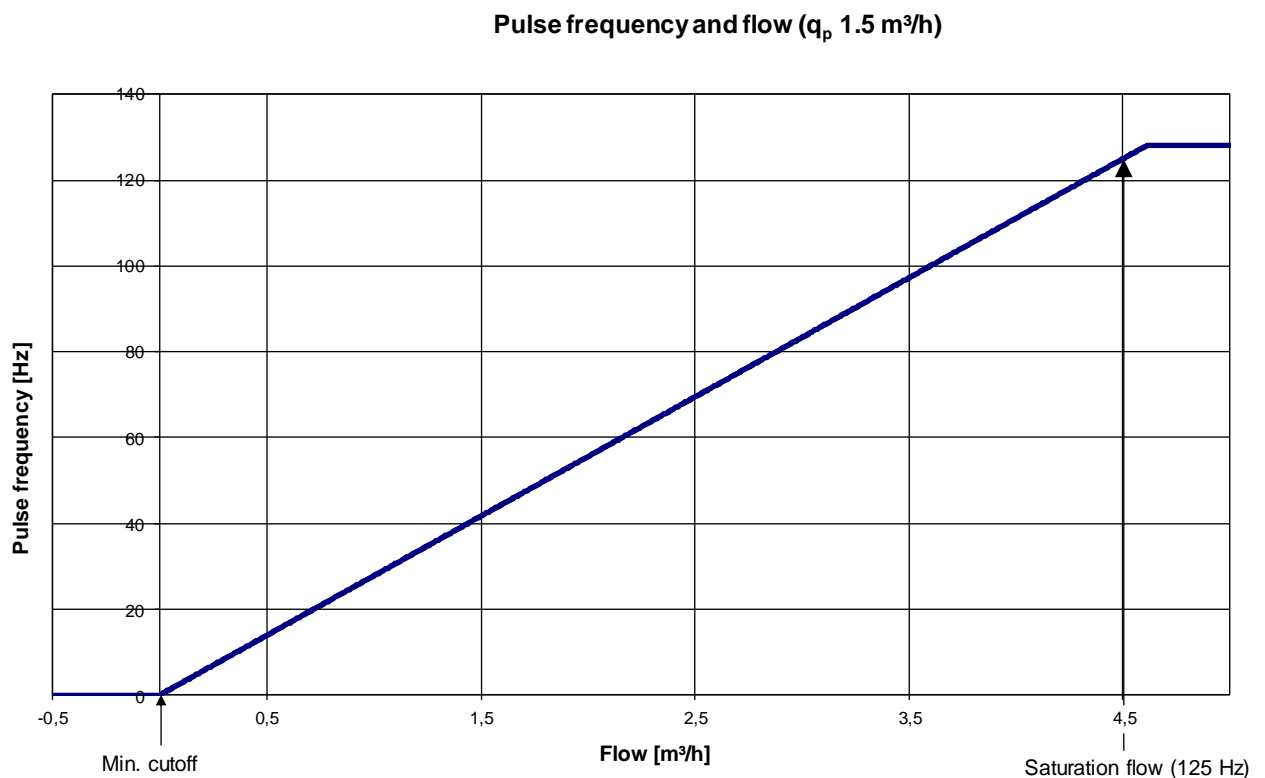


Figure 48. Pulse frequency as a function of flow $q_p 1.5 \text{ m}^3/\text{h}$.

If the flow is lower than min. cut off or negative (backward flow), ULTRAFLOW® does not emit pulses.

At flows exceeding the flow corresponding to pulse emission at max pulse frequency, the max pulse frequency will be maintained.

Table 25 shows the saturation flow at a pulse frequency of 125 Hz for the different flow sizes and meter factors.

q_p [m³/h]	Meter factor [imp/l]	Flow at 125 Hz [m³/h]
0.6	300	1.50
1.5	100	4.50
2.5	60	7.50
3.5	50	9.00
6	25	18.0
10	15	30.0
15	10	45.0
25	6	75.0
40	5	90.0
60	2,5	180
100	1,5	300

Table 25. Flow at saturation (125 Hz).

According to EN 1434, the upper flow limit q_s is the highest flow at which the flow sensor may operate for short periods of time (< 1h/day, < 200h/year) without exceeding max permissible errors. ULTRAFLOW® has no functional limitations during the period when the flow sensor operates above q_p .

Note, however, that high flow velocities may cause cavitation, especially at low static pressure. See paragraph 7.1.1 *Guidelines for dimensioning ULTRAFLOW®*.

8.4 Pulse emission

Pulses are emitted at 1-second intervals. The number of pulses to be emitted is calculated every second. Pulses are emitted in bursts with a pulse duration of 2...5 ms and pauses depending on the current pulse frequency. The duration of the pauses between the individual bursts is approx. 30 ms.

The transmitted pulse signal is the average determination of a series of flow measurements. This means that there will be a transient phenomenon until correct flow signal has been obtained during start-up. Furthermore, this brings about a pulse tail of up to 8 seconds in case of sudden hold.

8.5 Supply of ULTRAFLOW®

Normally, ULTRAFLOW® is supplied either via the connected MULTICAL® calculator or Pulse Transmitter/Pulse Divider. When ULTRAFLOW® is supplied in any other way, for example via direct connection in a flow bench, the following applies:

Supply voltage of ULTRAFLOW®:

3.6 VDC ±0.1 VDC

The current consumption of ULTRAFLOW®:

Max average 50 µA
 Max current 7 mA (max 40 ms)

8.6 Pulse output of ULTRAFLOW®

ULTRAFLOW®

Type	Push-Pull
Output impedance	~10 k Ω
Pulse duration	2...5 ms
Duration of pause	Depending on actual pulse frequency

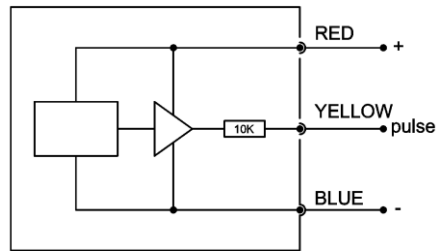


Figure 49. Block diagram for ULTRAFLOW®.

8.7 Pulse output of Pulse Transmitter and Pulse Divider

8.7.1 Galvanically separated output module (Y=2)

Pulse Transmitter/Pulse Divider is powered by the built-in supply module (Z=7 or 8).

The cable length to Pulse Transmitter/Pulse Divider depends on the calculator.

To calculator:

Type: Open collector.

Connection: Can be connected as two-wire or three-wire via the built-in 56.2 kΩ pull-up.

Module Y=2	OC and OD	(OB) Kam
Max input voltage	6 V	30 V
Max input current	0.1 mA	12 mA
ON condition	$U \leq 0.3 \text{ V @ } 0.1 \text{ mA}$	$U_{CE} \leq 2.5 \text{ V @ } 12 \text{ mA}$
OFF condition	$R \geq 6 \text{ M}\Omega$	$R \geq 6 \text{ M}\Omega$

Table 26

Concerning meter factors and pulse durations, see paragraph 4.4.4 Pulse Divider configuration CCC-DD-E-MMM.

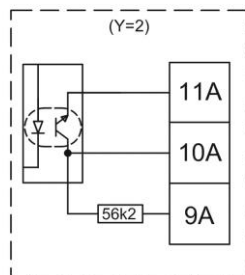


Figure 50. Block diagram for galvanically separated output module (Y=2).

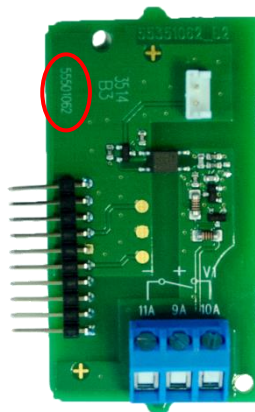


Figure 51. Galvanically separated output module (Y=2).
Note the PCB number 5550-1062 in the encircled area.

8.7.2 Galvanically separated output module (Y=3)

Pulse Transmitter/Pulse Divider is powered by the built-in supply module (Z=2, 7 or 8).

The cable length to Pulse Transmitter/Pulse Divider depends on calculator.

To calculator:

Type: Open collector.

Connection: Three-wire connection is possible via the built-in 39.2 kΩ pull-up.

Module Y=3	OC and OD
Max input voltage	6 V
Max input current	0.1 mA
ON condition	$U \leq 0.3 \text{ V @ } 0.1 \text{ mA}$
OFF condition	$R \geq 6 \text{ M}\Omega$

Table 27

Concerning meter factors and pulse durations, see paragraph 4.4.4 Pulse Divider configuration CCC-DD-E-MMM.

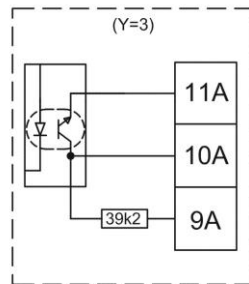


Figure 52. Block diagram for galvanically separated output module (Y=3).

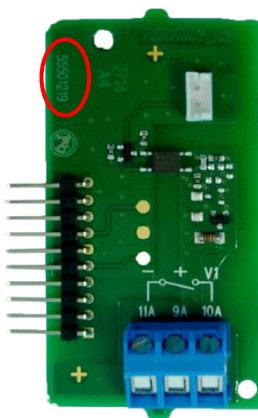


Figure 53. Galvanically separated output module (Y=3). Note the PCB number 5550-1219 in the encircled area.

8.8 Interface connector/serial data

ULTRAFLOW® 54 and 34 are fitted with a four-pole connector under the cover. Thus, it is not possible to access the connector without breaking the seal. The cover is supplied with a factory seal and in connection with verified sensors, it will be a laboratory seal (legal seal).

The connector is used for:

- Meter programming, including adjustment of flow charts by means of METERTOOL
- Bringing the sensor into test mode
- Reading accumulated water quantity in connection with calibration
- External control of start/stop in connection with calibration

Because of different physical PCB layouts, the connecting cables of the interfaces in ULTRAFLOW® 54 (type 65-5-XXHX-XXX) are slightly different from those of other types of ULTRAFLOW® 54 and ULTRAFLOW® 34. The interface connector is constructed as shown in *Figure 54*. Note that the general functions of the connection are identical, but the location of the individual functions is different.

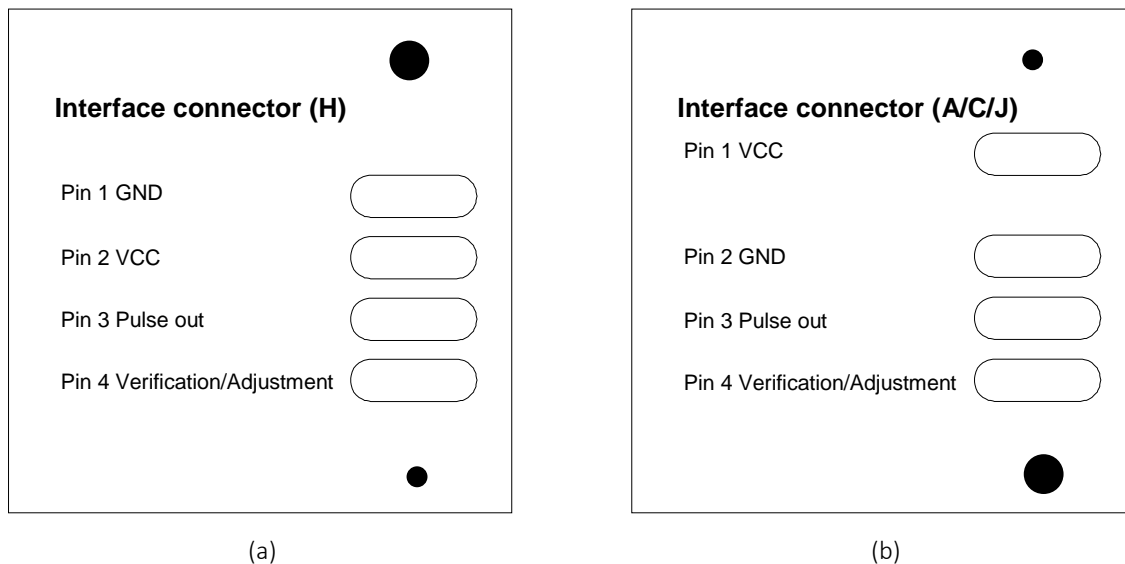


Figure 54. (a) Interface connector for ULTRAFLOW® 54 (type 65-5-XXHX-XXX) and (b) ULTRAFLOW® 54 (type 65-5-XXAX-XXX, types 65-5-XXCX-XXX and 65-5-XXJX-XXX) and ULTRAFLOW® 34.

In ULTRAFLOW® 34 the electronics is encapsulated and thus, the four-pole connector is not directly accessible. To gain access to pin 4, an adapter with four-pole connector is therefore used (Figure 55 (b)). Before clicking the adapter onto the electronics case, a hole is drilled ($\varnothing 2$ mm, max drilling depth 10 mm) in the cover of the electronics case at the marking (Figure 55 (a)). Subsequently, the signal cable is connected to the terminals of the adapter.

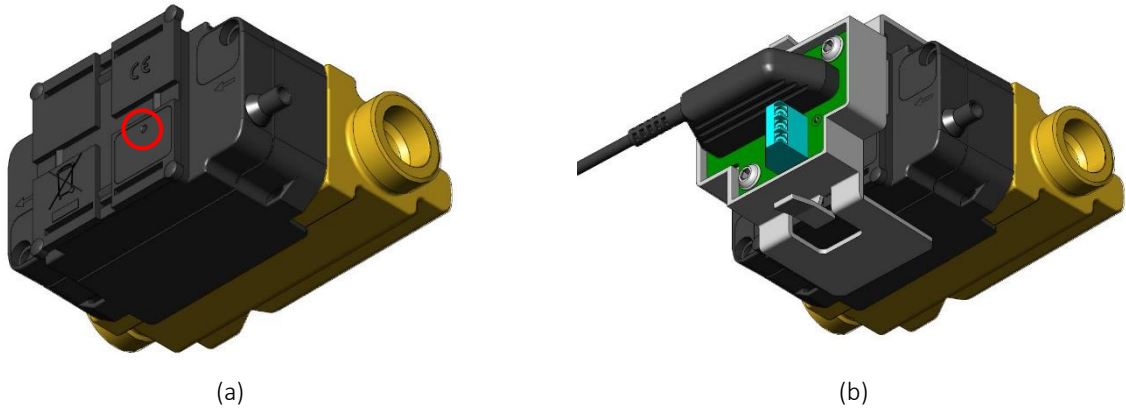


Figure 55. Drill hole marking on ULTRAFLOW® 34 cover (a) and ULTRAFLOW® 34 with adapter 6699-006 (b).

8.9 Test mode

To minimize the time spent on calibration, ULTRAFLOW® 54/34 can be switched into test mode. When ULTRAFLOW® is in test mode (verification mode), the measuring routines only take one fourth of the time they take in normal mode.

ULTRAFLOW® is put into test mode by connecting pin 4 (Verification/Adjustment) on the internal connector to ground (GND), which is located at pin 1 or 2, respectively (see *Figure 54*) and subsequently connecting the supply. After approx. 1 second, the sensor goes into test mode and the connection between pin 4 and frame must be disconnected again.

Test mode is ended automatically by disconnecting the supply to the sensor.

Note: ULTRAFLOW® in test mode uses approx. 3 times as much power as in normal mode. However, this does not influence the total battery lifetime of the energy meter as the total duration of ULTRAFLOW® in test mode is negligible compared to the operating time of ULTRAFLOW® outside test mode.

8.10 Externally controlled start/stop

In connection with calibration by means of serial data, e.g. in connection with NOWA, ULTRAFLOW® 54/34 can be monitored by an external signal when it is in verification mode (see paragraph 8.9 *Test mode*). This is done by grounding pin 4 of the internal plug when starting the test and removing it when the test has been completed. The volume of water that has been accumulated during the test can be read serially.

The accumulation is based on the same data as those used for calculating the number of pulses to be emitted.

In addition to accumulating water volume during test, the sensor corrects for the excess quantity in connection with start as well as the quantity lacking in connection with stop. These deviations are due to the fact that the sensor measures flow and calculates volume at fixed intervals as illustrated in *Figure 56*.

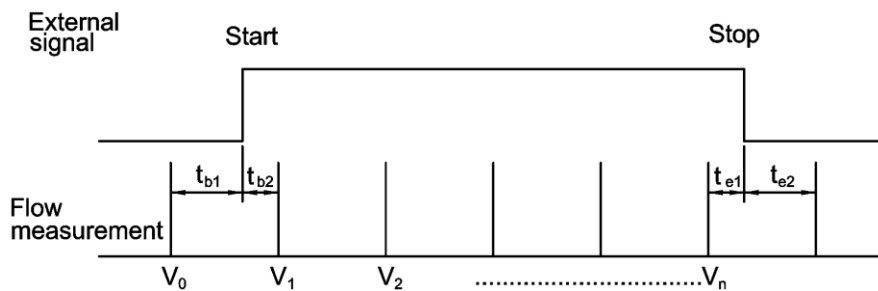


Figure 56

The excess quantity of water in connection with start is the water volume that passes through the sensor t_{b1} before the first accumulation V_1 within the test period. In the same way, the lacking quantity is the water volume passing through the sensor t_{e1} after the last accumulation V_n until stop.

The volume accumulated during the test can be stated as:

$$V_{test} = \frac{t_{b2}}{t_{b1} + t_{b2}} \cdot V_1 + V_2 + \dots + V_n + \frac{t_{e1}}{t_{e1} + t_{e2}} \cdot V_n$$

8.11 Calibration using serial data and externally controlled start/stop

The routine for calibrating ULTRAFLOW® using serial data is outlined below.

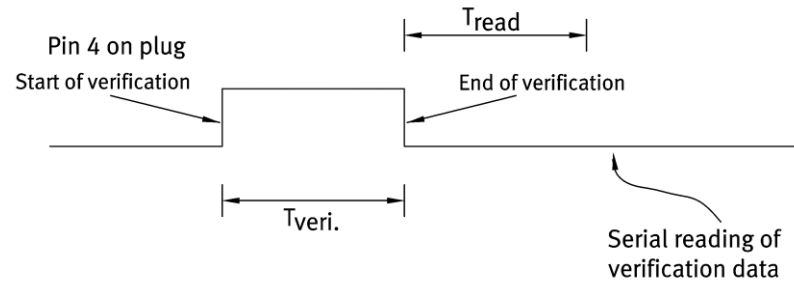


Figure 57

The sensor must be in test mode (see paragraph 8.9 Test mode).

Calibration is started by grounding pin 4 of the internal connector (see Figure 57) and at the same time starting the test in a flow stand. This might e.g. take place at the same time as the master meter starts accumulating pulses or the diverter of the weight is changed. Then, ULTRAFLOW® accumulates the water volume until pin 4 is disconnected to terminate the test. Subsequently, the volume accumulated during the test can be read in consideration of start and stop. From the test has been completed and until the accumulated quantity of water can be read, minimum 2 seconds must pass (T_{read}). Communication with ULTRAFLOW® during test is not allowed.

Pulse emission stops when pin 4 is disconnected. The read water quantity and the number of emitted pulses may differ as the pulse emission is monitored in intervals of 1 second.

8.12 Accuracy

ULTRAFLOW® has been developed as a volume flow rate sensor for energy meters according to EN 1434. The tolerances permitted for flow sensors according to EN 1434 with a dynamic range of 100:1 ($q_p:q_i$) and q_p 1,5 m³/h are shown in *Figure 58*. The tolerances are defined for class 2 and class 3 with following formulas:

Class 2: $\pm \left(2 + 0,02 \cdot \frac{q_p}{q} \right) \%$, however max $\pm 5 \%$

Class 3: $\pm \left(3 + 0,05 \cdot \frac{q_p}{q} \right) \%$, however max $\pm 5 \%$

EN 1434 defines the following dynamic ranges ($q_p:q_i$): 10:1, 25:1, 50:1, 100:1 and 250:1.

In connection with accuracies, the range from q_p to q_s is defined as max flow short-term where tolerances are adhered to. There are no requirements to the relation between q_p and q_s . See *Table 1* for information on q_s for ULTRAFLOW®.

To render probable that the sensors meet the tolerance requirements, EN 1434-5 specifies calibration requirements in connection with verification of sensors. It is required that flow sensors are tested at the following 3 points:

$q_i \dots 1.1 \times q_i$, $0.1 \times q_p \dots 0.11 \times q_p$ and $0.9 \times q_p \dots q_p$

During test, the water temperature must be 50 °C \pm 5 °C for ULTRAFLOW® as a heat meter.

For ULTRAFLOW® as a cooling meter, the water temperature must be 15 °C \pm 5 °C.

Further requirements are that the tolerance of the equipment used to perform the test must be less than 1/5 MPE (Maximum Permissible Error) to permit the acceptance limit to be equal to MPE. If the equipment does not observe 1/5 MPE, the acceptance limit must be reduced by the tolerance of the equipment.

ULTRAFLOW® will typically do better than half of the permitted tolerance according to EN 1434 class 2.

Note: For further information regarding allowable test conditions such as water temperature and flow of the individual ULTRAFLOW®, see the approval of ULTRAFLOW® (see paragraph 11 *Approvals*).

Flow sensor tolerances $q_p:q_i$ 100:1 (q_p 1.5 m³/h)

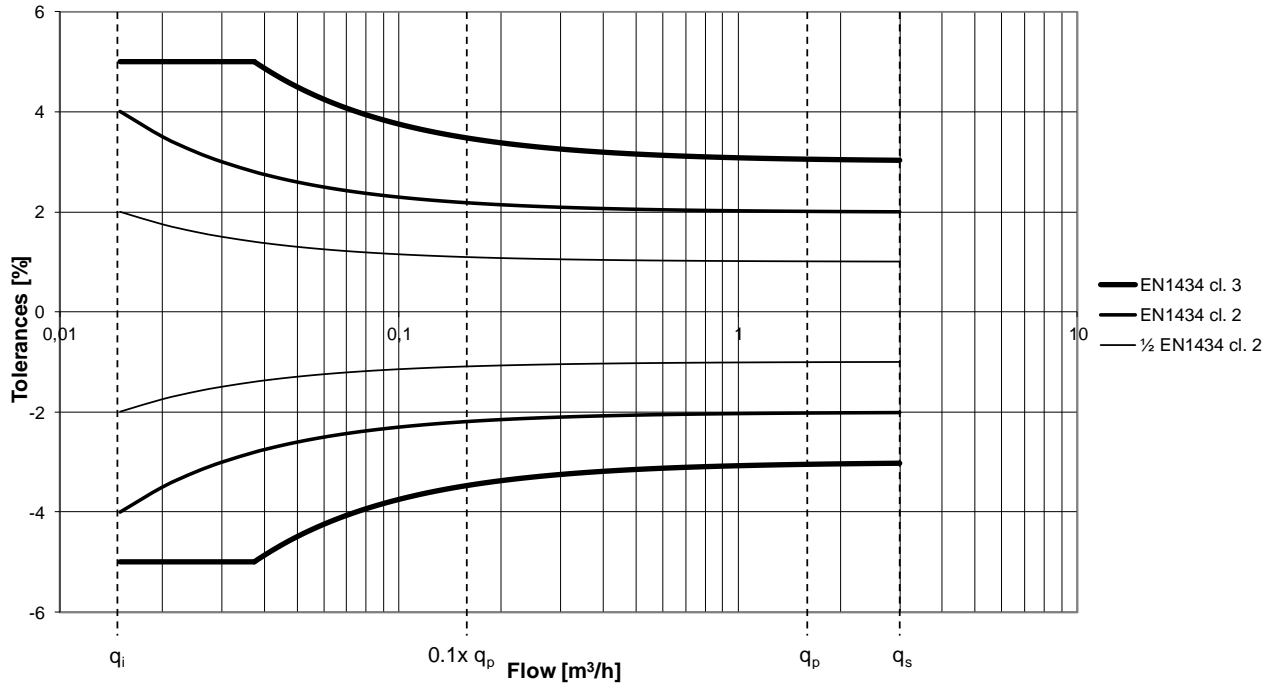


Figure 58. Flow sensor tolerances specified as an example for a flow sensor with q_p 1.5 m³/h and $q_p:q_i = 100:1$.

9 Calibrating ULTRAFLOW®

Calibration can be based on:

- Pulses in standard mode.
- Pulses in test mode.
- Pulses using Pulse Tester type 6699-279.
- On serial data with the meter in test mode (e.g. used in connection with NOWA).

9.1 Technical data for ULTRAFLOW®

ULTRAFLOW® emits flow-proportional pulses in accordance with *Table 28*. If ULTRAFLOW® is connected to equipment other than MULTICAL® calculators, for example a flow bench, it is recommended to use galvanic separation via Pulse Transmitter or Pulse Divider.

q _p [m³/h]	Meter factor [imp/l]
0.6	300
1.5	100
2.5	60
3.5	50
6	25
10	15
15	10
25	6
40	5
60	2.5
100	1.5

Table 28. Output signal.

Output ULTRAFLOW®

Type	Push-Pull
Output impedance	~10 kΩ
Pulse duration	2...5 ms
Duration of pause	Depending on actual pulse frequency

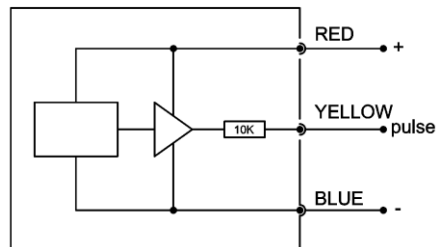


Figure 59. Block diagram for ULTRAFLOW®.

Note: From start-up, it takes minimum 16 seconds until true flow reading has been reached and calibration can start. In addition, the calibration duration must be at least 2 minutes to obtain the correct flow measurement, but a minimum test time of 3 minutes is recommended. See paragraph 9.3 *Suggested test points* for further information about suggested test points.

9.2 Electrical connection

Connection via 3-wire cable from ULTRAFLOW®

Yellow	Signal
Red	Supply
Blue	Ground
Supply	3.6 VDC ±0.1 VDC

Output using Pulse Transmitter/Pulse Divider with galvanically separated output module (Y=2)

Type Open collector. Two-wire or three-wire connection is possible via the built-in 56.2 kΩ pull-up resistor.

Module Y=2	OC and OD	(OB) Kam
Max input voltage	6 V	30 V
Max input current	0.1 mA	12 mA
ON condition	$U \leq 0.3 \text{ V @ } 0.1 \text{ mA}$	$U_{CE} \leq 2.5 \text{ V @ } 12 \text{ mA}$
OFF condition	$R \geq 6 \text{ M}\Omega$	$R \geq 6 \text{ M}\Omega$

Table 29

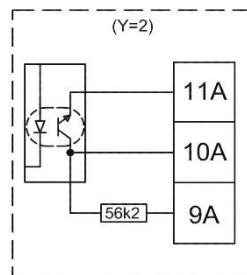


Figure 60. Block diagram for galvanically separated output module (Y=2).

Output using Pulse Transmitter/Pulse Divider with galvanically separated output module (Y=3)

Type Open collector. Three-wire connection via the built-in 39.2 kΩ pull-up resistor.

Module Y=3	OC and OD
Max input voltage	6 V
Max input current	0.1 mA
ON condition	$U \leq 0.3 \text{ V @ } 0.1 \text{ mA}$
OFF condition	$R \geq 6 \text{ M}\Omega$

Table 30

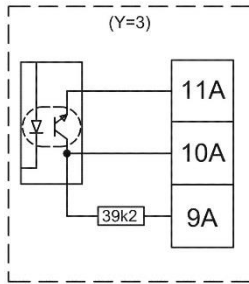


Figure 61. Block diagram for galvanically separated output module (Y=3).

9.3 Suggested test points

Nom. flow q_p [m³/h]	Meter factor [pulses/l]	Test point			Test duration			Test quantities		
		q_p [m³/h]	q_i [m³/h]	$0.1 \times q_p$ [m³/h]	q_p [min]	q_i [min]	$0.1 \times q_p$ [min]	q_p [kg]	q_i [kg]	$0.1 \times q_p$ [kg]
0.6	300	0.6	0.006	0.06	3	20	6	30	2	6
1.5	100	1.5	0.015	0.15	3	20	6	75	5	15
2.5	60	2.5	0.025	0.25	3	20.2	6	125	8.4	25
3.5	50	3.5	0.035	0.35	3	17.1	6	175	10	35
6	25	6	0.06	0.6	3	20	6	300	20	60
10	15	10	0.1	1	3	20.4	6	500	34	100
15	10	15	0.15	1.5	3	20	6	750	50	150
25	6	25	0.25	2.5	3	20.2	6	1250	84	250
40	5	40	0.4	4	3	15	6	2000	100	400
60	2.5	60	0.6	6	3	20	6	3000	200	600
100	1.5	100	1	10	3	20	6	5000	333	1000

Table 31. Table for ULTRAFLOW® including suggested test points, test durations and test quantities.

The suggested test parameters are based on EN 1434-5 and $q_p:q_i$ 100:1.

The test set-ups have been selected on the basis of the following requirements:

- Minimum test duration of 3 minutes
- Water volumes at q_i and $0.1 \times q_p$ of minimum 10 % of the water volume per hour
- Water volume at $0.1 \times q_p$ corresponding to minimum 1000 pulses
- Water volume at q_i corresponding to minimum 500 pulses

These suggested test points can be optimized for the test benches as well as for the test purpose.

9.4 Optimization in connection with calibration

To make a rational test of ULTRAFLOW®, it must be possible to reproduce the test results. This is also very important if the tested sensors are to be adjusted.

Experience shows that ULTRAFLOW® operates with standard deviations of 0.3...0.4 % at q_i and 0.2...0.3 % at q_p . This is standard deviations at 300...500 pulses at q_i , 3000...5000 at q_p , and flying start/stop.

In connection with the optimization of calibration, the following subcomponents can be considered:

Pressure: Optimal working pressure is 4...6 bar of static pressure. This minimises the risk of air and cavitation.

Temperature: Calibration temperature according to EN 1434-5 is 50 °C ± 5 °C for heat meters and 15 °C ± 5 °C for cooling meters.

Note: For further information regarding allowable test conditions such as water temperature and flow of the individual ULTRAFLOW®, see the approval of ULTRAFLOW® (see paragraph 11 Approvals).

Water quality: Recommended water quality as described in CEN TR 16911 and AGFW FW510

Installation (mechanical conditions):

To avoid flow disturbances, the inlet pipes and distance pieces must have the same nominal diameter as the sensors (see Table 32). There should be min. 5 x DN between the sensors. In connection with bends, etc., there should be a minimum distance of 10 x DN. If tests are made at low flow with a bypass at right angles to the pipe, it will be an advantage to mount an absorber of pressure fluctuations caused by the perpendicular inlet. This can be a flexible tube on the bypass. In addition, it will be an advantage to mount a flow straightener before the first distance piece. Flow disturbances such as pulsations, e.g. pump fluctuations must be minimised. In connection with calibration, a code of practice for distance pieces has been made on the basis of many years' experience:

The lengths of the distance pieces must be 10 x DN.

The diameter of the distance pieces must be:

Connection	Distance piece
G¾B (R½) DN15	ø15
G1B (R¾) DN20	ø20
DN20	ø20
G5/4B (R1) DN25	ø25
DN25	ø25
G1½B (R5/4) DN32	ø32
DN32	ø32
G2B (R1½) DN40	ø40
DN40	ø40
DN50	ø50
DN65	ø65
DN80	ø80
DN100	ø100
DN125	ø125

Table 32. Distance pieces.

At horizontal mounting of ULTRAFLOW® 54/34, which is typical for a flow bench, pay special attention to Figure 17 Orientation of ULTRAFLOW® 54/34 around the pipe axis at horizontal mounting. As a starting point, it is recommended to install threaded meters with the plastic box to the side, which is metrologically correct and ergonomic for the mounting of a 4-pole connector in ULTRAFLOW® 54/34 (see Figure 54 and Figure 55). The orientation of flange meters is normally less flexible and defined by the holes in the flanges and bolts in the flow bench. Here, the plastic box is typically turned +45° upwards. Note that ULTRAFLOW® must **NOT** be evacuated (exposed to vacuum). To make it easier to bleed the meter, you can, in contrary to our general installation recommendations, still install ULTRAFLOW® 54 (type 65-5-XXHX-XXX) in the flow bench during the test with the electronics (transducers) pointing downwards.

ULTRAFLOW® 54/34

Installation (electrical conditions):

To avoid interference from the outside as well as to obtain an electrical interface to MULTICAL®, it is recommended to use a Pulse Tester (see paragraph 9.5) or to connect a Pulse Transmitter between ULTRAFLOW® and the relevant test equipment that counts pulses to achieve galvanic separation. If the test equipment supports NOWA, see paragraph 9.6 for more information.

9.5 Pulse Tester

During a calibration process, it is often practical to use Pulse Tester type no. 6699-279, which has the following functions:

- Galvanically separated pulse outputs
- Integral supply for ULTRAFLOW®
- LCD display with counter
- Externally controlled "Hold" function
- Can be fitted directly on a MULTICAL® base unit (type 66- and 602-)

9.5.1 Technical data for Pulse Tester

Pulse inputs (M1/M2)

Counter inputs	Max frequency: 128 Hz
Active signal	Amplitude: 2.5 - 5 Vpp
Pulse duration	> 1 ms
Passive signal	Internal pull-up 680 kΩ
Internal supply	3.65 V lithium battery

Note: Depending on the connecting base used, there will be one or two pulse inputs/outputs.

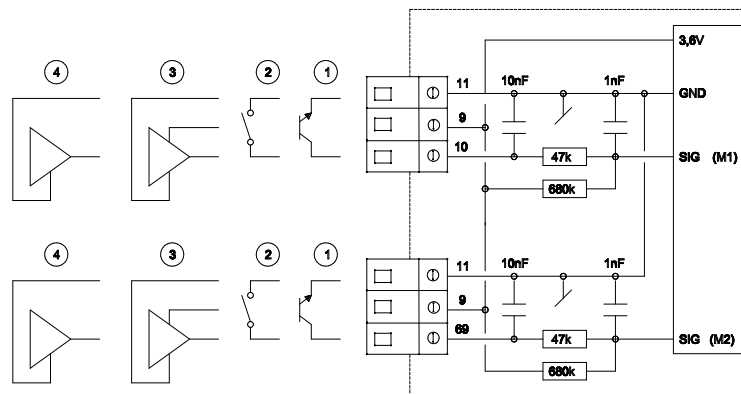


Figure 62

1 Flow sensor with transistor output

The transmitter is normally an optocoupler with FET or transistor output to be connected to terminals 10 and 11 for flow sensor M1 and terminals 69 and 11 for flow sensor M2.

The leak current of the transistor must not exceed 1 μA in OFF-state, and U_{CE} in ON-state must not exceed 0.5 VDC.

2 Flow sensor with relay or reed switch output

The transmitter is a reed switch, which is normally mounted on vane wheel and Woltmann meters, or relay output from e.g. MID meters. This type of transmitter should not be used as the quick pulse input may cause bounce problems.

3 **Flow sensor with active pulse output, powered by Pulse Tester**

This connection is used together with either Kamstrup's ULTRAFLOW® or Kamstrup's electronic pick-up for vane wheel meters.

Connection (M1)	9: Red (9A)	10: Yellow (10A)	11: Blue (11A)
Connection (M2)	9: Red (9A)	69: Yellow (10A)	11: Blue (11A)

Table 33

4 **Flow sensor with active output and integral supply**

Flow sensors with active signal output are connected as shown in *Figure 62*. The signal level must be between 3.5 and 5 V. Higher signal levels can be connected via a passive voltage divider, e.g. 47 kΩ/10 kΩ at signal level 24 V.

Pulse outputs (M1/M2)

Pulse duration > 4 ms
 Duration of pause Depending on the actual pulse frequency

Two-wire connection:

Voltage < 24 V
 Load > 1.5 kΩ

Three-wire connection:

Voltage 5...30 V
 Load > 5 kΩ

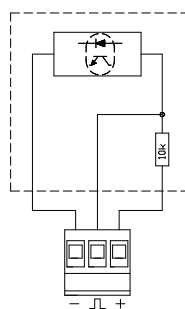


Figure 63

The outputs are galvanically separated and protected against overvoltage and reversed polarity.

Max counter capacity before overflow is 9,999,999 counts.

9.5.2 Hold function

When the Hold input is activated (high level applied to input), counting stops at the number of pulses counted.

When the Hold signal is removed (low level applied to input), counting restarts.

The counters can also be reset by pressing the right key on the front panel (Reset).

Hold input	Galvanically separated
Input protection	Against reversed polarity
“Open input”	Count (see <i>Figure 64</i>)

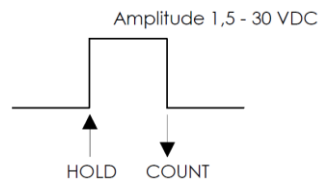


Figure 64

9.5.3 Push-button functions



Figure 65. The left push-button shifts between readings/counts of the two flow sensor inputs. In the display, M1 and M2 respectively indicate the currently displayed flow sensor inputs/counters.



Figure 66. The right push-button resets both counters (M1 and M2).

9.5.4 Use of Pulse Tester

Pulse Tester can be used as follows:

Standing start/stop of the flow sensor using the integral pulse counters.

Standing start/stop of the flow sensor using the pulse outputs for external test equipment.

With flying start/stop of the flow sensor using the integral counters controlled by external equipment (Sample & Hold).

With flying start/stop of the flow sensor using the pulse outputs controlled by external equipment (Sample & Hold).

9.5.5 Spare parts

Description	Type No.
Battery D-cell	1606-064
Cable retainer (secures the battery)	1650-099
2-pole plug (female)	1643-185
3-pole plug (female)	1643-187
Base PCB (66-R)	5550-517

Table 34. Spare parts for Pulse Tester.

9.5.6 Battery replacement

If Pulse Tester is used continuously, it is recommended to replace the battery once a year.

The battery connector is cut and the cable insulation is removed before the battery is connected to the terminals marked "Batt", the red wire to + and the black wire to -.

Current consumption:

Current consumption with no sensors connected	400 µA
Max current consumption with two ULTRAFLOW® connected	1.5 mA

Note: If the base unit is fitted with battery or externally supplied, the Pulse Tester's integral supply must be disconnected (unplugged).

9.6 NOWA

NOWA describes a standardized interface between the heat meter laboratory test equipment (e.g. flow bench) and is mainly used in laboratories in Germany and Austria. The NOWA test of ULTRAFLOW® 54 (q_p 0.6...100 m³/h) is supported in combination with MULTICAL®. For more information about the test of ULTRAFLOW® with NOWA, see Kamstrup documentation 5585-703 (Hardware) and 5585-706 (Software). NOWA does not support the testing of ULTRAFLOW® 34. Verification of ULTRAFLOW® 34 is carried out via tracing of pulses.

9.7 Sealing

ULTRAFLOW® is sealed from the factory. Verified sensors will be supplied with security seals and a year mark as shown below.

If the seal of a verified sensor is broken, the sensor must be reverified before being installed in a location demanding verification.

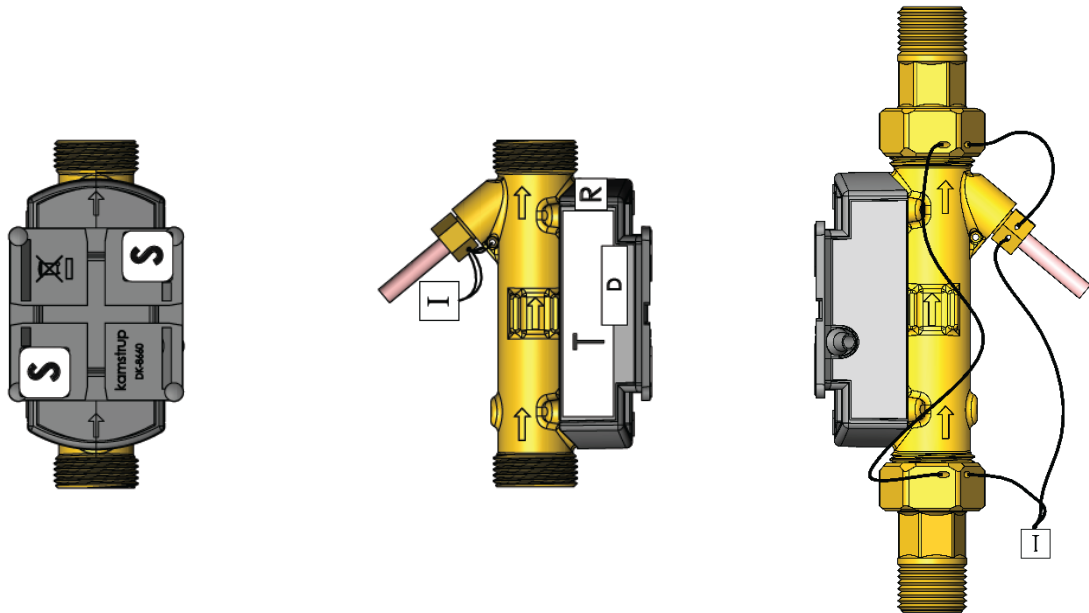


Figure 67. Sealing and marking of ULTRAFLOW® 54 (Type 65-5-XXHX-XXX).

In the drawings, sealing is divided into the following groups:

- D Module D/F label or sealing label (depending on type label).
- S Laboratory marking. Sealing of screws.
- T Type label (as void label or with security seal D).
- I Installation seal (wire and seal or sealing label).
- R Reverification labelling (suggested position).

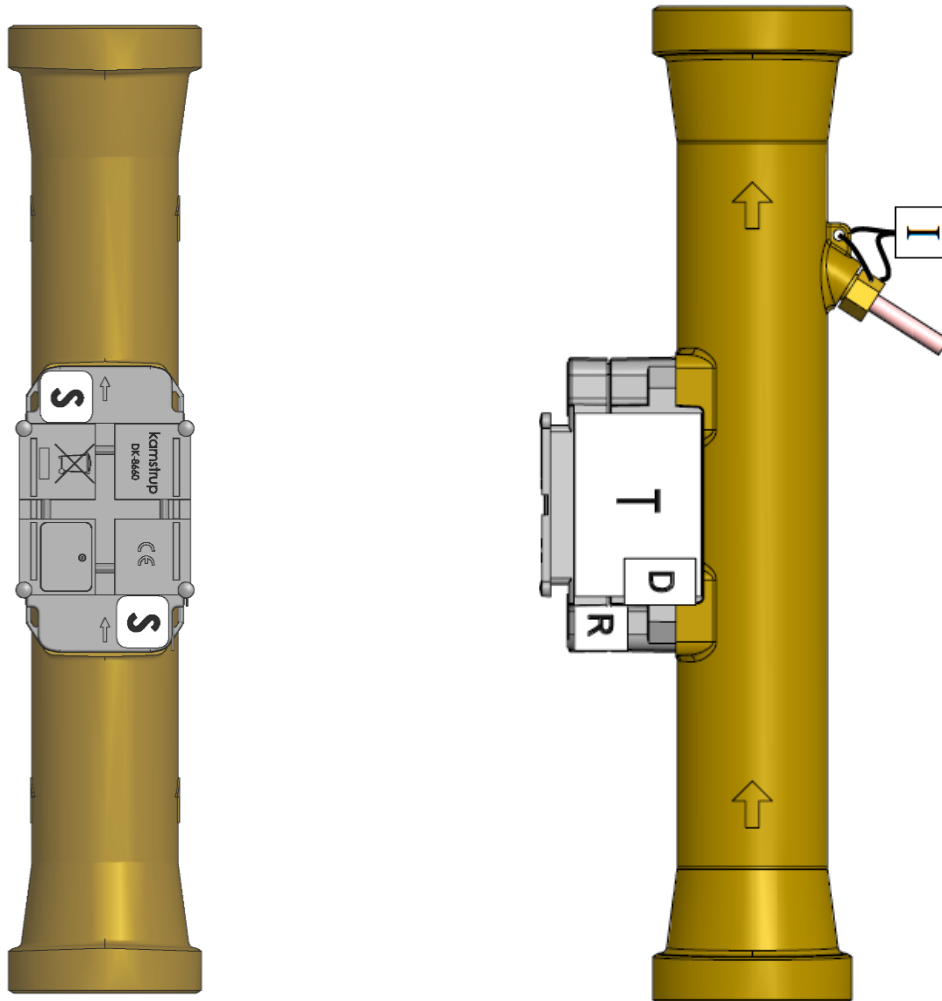


Figure 68. Sealing and marking of ULTRAFLOW® 54 (Type 65-5-XXCX-XXX and 65-5-XXJX-XXX) and ULTRAFLOW® 34.

In the drawings, sealing is divided into the following groups:

- D Module D/F label or sealing label (depending on type label).
- S Laboratory marking. Sealing of screws.
- T Type label (as void label or with security seal D).
- I Installation seal (wire and seal or sealing label).
- R Reverification labelling (suggested position).

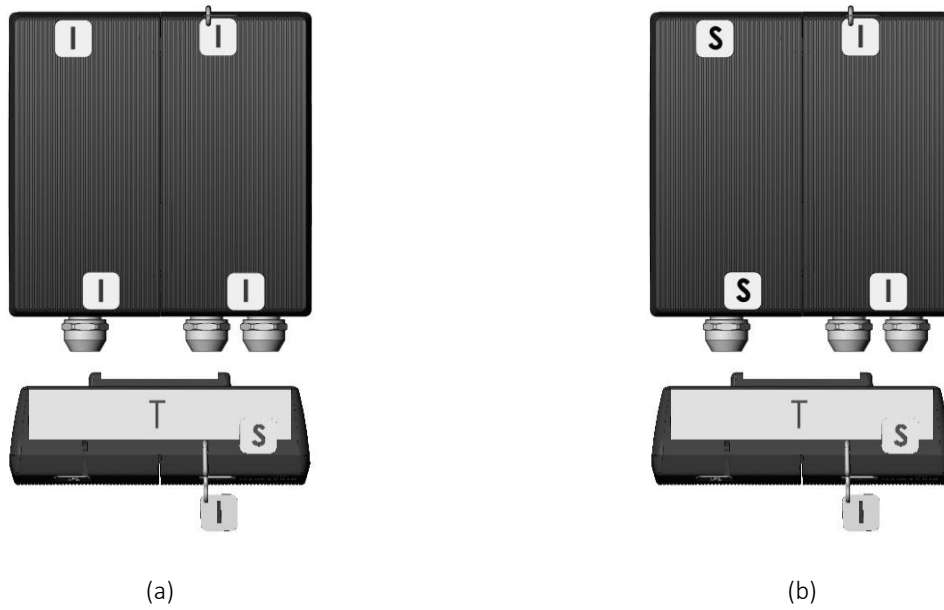


Figure 69. Sealing of Pulse Transmitter (a)/Pulse Divider (b).



Figure 70. Sealing of Cable Extender Box seen from the front (a) and from the side (b).

In the drawings, sealing is divided into the following groups:

- S Laboratory marking. Sealing of screws.
- T Type label (as void label or with security seal S).
- I Installation seal (wire and seal or sealing label).

Note: Sealing requirements may vary as a consequence of national regulations.

10 Software for Kamstrup heat/cooling meters

To adjust ULTRAFLOW® and to programme Pulse Divider, the software METERTOOL HCW 6699-724 is used. For more information, see the Technical description of METERTOOL HCW (5512-2097_GB).

11 Approvals

11.1 MID and DK-BEK 1178 – 06/11/2014

ULTRAFLOW® 54/34 is approved as heat meter in accordance with MID 2014/32/EU:

EU-type examination certificate:	DK-0200-MI004-033 (ULTRAFLOW® 54 Type 65-5-XXHX-XXX and 65-5-XXJX-XXX)
EU-type examination certificate:	DK-0200-MI004-008 (ULTRAFLOW® 54 Type 65-5-XXAX-XXX and 65-5-XXCX-XXX as well as ULTRAFLOW® 34 and ULTRAFLOW® 54 $q_p \geq 150 \text{ m}^3/\text{h}$)
MID certification according to Module D:	DK-0200-MID-D-001

ULTRAFLOW® 34 is approved as cooling meter in accordance with DK-BEK 1178 – 06/11/2014:

System designation:	TS 27.02 002 (ULTRAFLOW® 54 $q_p \geq 150 \text{ m}^3/\text{h}$ and ULTRAFLOW® 34)
Verification:	DANAK accreditation 268

Please contact Kamstrup A/S for further details on type approval and verification.

11.2 CE marking

In addition, ULTRAFLOW® is marked according to the following directives:

EMC directive	2014/30/EU
LV directive	2014/35/EU (when connected to mains-supplied Pulse Transmitter or Pulse Divider)
PE directive	2014/68/EU (DN50...DN125 category I)

11.3 EU declaration of conformity

With each ULTRAFLOW® 54 DN15-125 and ULTRAFLOW® 34 delivered from Kamstrup, an EU declaration of conformity is provided, see Kamstrup documentation 5518-308 and 5518-307, respectively.

12 Troubleshooting

Before sending in the sensor for repair or testing, please use the error detection table below to help you clarify the possible cause of the problem.

Symptom	Possible cause	Proposal for correction
No updating of display values	No power supply	Replace battery or check mains supply
No display function (blank display)	No power supply and backup	Replace back-up cell. Replace battery or check mains supply
No accumulation of m ³	No volume pulses Incorrect connection Flow sensor is inverted Air in sensor/cavitation Flow sensor error	Check flow sensor connection (Check with PULSE TESTER, if necessary) Check flow sensor direction Check installation angle. Check if there is air in the system or cavitation from valves and pumps. If possible, try to increase the static pressure Replace the flow sensor/send meter for repair
Erroneous accumulation of m ³	Erroneous programming Air in sensor/cavitation Flow sensor error	Check that meter factors of calculator and flow sensor correspond Check the installation angle. Check if there is air in the system or cavitation from valves and pumps. Increase the static pressure, if possible Replace the flow sensor/send sensor for repair

13 Disposal

Kamstrup A/S holds an environmental certification according to ISO 14001 and as part of Kamstrup's environment policy, materials that can be recovered environmentally correctly are used to the greatest possible extent.

Kamstrup A/S has climate accounts (Carbon footprint) for all meter types.



Kamstrup's heat meters are marked according to the EU directive 2012/19/EU and the standard EN 50419.

The purpose of the marking is to inform our customers that the heat meter cannot be disposed of as ordinary waste.

- **Disposal by Kamstrup A/S**

Kamstrup A/S accepts worn-out meters for environmentally correct disposal according to previous agreement. The disposal is free of charge to our customers, except for the cost of transportation to Kamstrup A/S.

- **The customer sends for disposal**

The meters must not be disassembled prior to dispatch. The complete meter is handed in for approved national/local disposal. Enclose a copy of this page in order to inform the recipient of the contents.

Lithium cells and meters including lithium cells must be forwarded as dangerous goods (see Kamstrup document 5510-408, "Lithium batteries - Handling and disposal").

Meter part	Material	Recommended disposal
Lithium cells in Pulse Transmitter/ Pulse Divider (D-cell)	Lithium and thionyl chloride > UN 3091 < D-cell: 4.9 g lithium	Approved deposit of lithium cells
PCBs in Pulse Transmitter, Pulse Divider and ULTRAFLOW®	Coppered epoxy laminate, components soldered on	PCB scrap for concentration to metals
Flow sensor cables	Copper with silicone mantle	Cable recycling
Plastic parts, cast	PES, PC and ABS. See material data	Plastic recycling
ULTRAFLOW® meter case	DZR brass and stainless steel	Metal recycling
Packing	Recycled cardboard and EPS	Cardboard recycling (Resy) and EPS recycling

Please send any questions you may have regarding environmental matters to:

Kamstrup A/S
 Att.: Quality and environmental dept.
 Fax: +45 89 93 10 01
 info@kamstrup.com

14 Documents

	Danish	English	German	Russian
Technical description				
ULTRAFLOW® 54/34 DN15-125	5512-2463	5512-2464	5512-2465	5512-2466
ULTRAFLOW® 54 DN150-300	5512-875	5512-876	5512-877	5512-878
Data sheet				
ULTRAFLOW® 54 DN15-125	5810-1546	5810-1547	5810-1548	5810-1549
ULTRAFLOW® 34 DN15-125	5810-1244	5810-1273	5810-1274	-
ULTRAFLOW® 54 DN150-300	5810-834	5810-835	5810-836	5810-837
Installation guide				
ULTRAFLOW® & MULTICAL® 603	5512-2069	5512-2070	5512-2071	5512-2076
ULTRAFLOW® & MULTICAL® 803	5512-2411	5512-2412	5512-2413	-
ULTRAFLOW® 54 DN150-300	5512-886	5512-887	5512-888	5512-889
Pulse Transmitter/Pulse Divider	5512-1387	5512-1421	5512-1422	-
Cable Extender Box	5512-2008	5512-2008	5512-2008	-

Table 35. ULTRAFLOW® documentation.